

Philips Bodygroom series
5000
Showerproof body
groomer

Skin comfort system

3 combs, 3-7 mm
50 mins' cordless use/1 hr charge
Back attachment



BG2036/32

Close trim, comfortable shave

Even in hard-to-reach areas

The Series 5000 is designed to power through hair, without compromise on skin comfort. Whether on the chest or hard-to-reach areas like the back, you can shave with the skin comfort system or trim using the 3-, 5- or 7-mm-length combs.

Easy to use

- 50 minutes cordless use after a 1-hour charge
- Extra-long handle makes it easier to reach your back
- Easy to grip
- Easy to clean and use in or out of the shower

Skin-friendly performance

- Rounded tips and hypoallergenic foil for skin comfort
- Includes 3 combs for a 3-, 5- or 7-mm trim
- Confidently trim or shave all body zones

Built to last

- Warranty for purchase protection

PHILIPS

Showerproof body groomer

Skin comfort system 3 combs, 3-7 mm, 50 mins' cordless use/1 hr charge, Back attachment

Highlights

Skin comfort system



Designed to be safe and comfortable for the underarms, chest and abs, back and shoulders, groin area and legs. The skin comfort system catches and cuts hairs of different lengths, without the need for multiple tools or skin contact with sharp edges. The bi-directional trimmers cut longer hairs, which are shaved by the foil for a closer result.

Skin-friendly tips and foil



The skin comfort system features a hypoallergenic foil and rounded tips to protect your skin while shaving.

3 combs included, 3-7 mm



3 combs included for different body hair lengths. Attach the combs to the shaving


system to trim hair to fixed length settings of 3 mm, 5 mm or 7 mm. You can use the shaving system without the combs for a closer result. For thicker hair, pre-trimming with the fixed combs is recommended.

Shave your back



Conveniently remove back hair. This attachment has been specially designed for convenient back grooming.

Rechargeable battery power

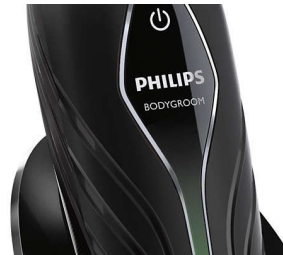

High-power NiMH battery for full-body use, with 50 minutes of cordless use after a 1-hour charge. The battery light indicates power status when the battery is low or full.


BG2036/32

100% showerproof



Provides a comfortable and close result in and out of the shower. The body groomer is 100% showerproof, so you can simply rinse it clean when you've finished. For longer hair, trimming performance may be better on dry hair.

Ergonomic grip

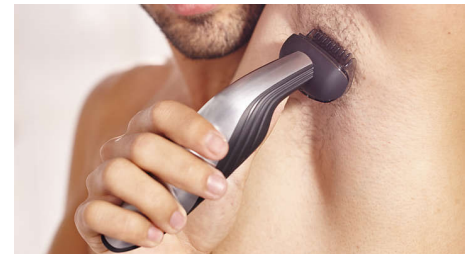

Your body groomer is easy to hold and manoeuvre, with a rubber ergonomic grip to help you keep control while you trim.

Built to last



All of our grooming products are built to last. They come with a 2-year warranty and they never need to be oiled.

Specifications

Create the look you want

- Number of length settings: 3 fixed length settings

Accessories

- Stand: Charging stand
- Back handle attachment

Power

- Battery type: Ni-MH
- Run time: 50 minutes
- Charging: 1 hour full charge

Design

- Handle: Ergonomic grip and handling

Service

- 2-year worldwide guarantee

Cutting system

- Cutter width: 32 mm
- Shaving element: Foil with two pre-trimmers
- Skin comfort: Skin comfort system, Comfort in sensitive areas

Ease of use

- Maintenance-free: No oil needed
- Wet and Dry: Fully washable, Showerproof and easy cleaning
- Secured length settings
- Operation: Cordless use



Issue date 2024-04-13

Version: 8.8.1

EAN: 87 10103 58075 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com