

PHILIPS

Wet and dry electric
shaver

Shaver series 3000

ComfortCut Blade System

Flexing heads

AT886/16

Great skin protection, smooth shave

Now enjoy a refreshing shave without worrying about damaging your skin. The Aquatec seal ensures a comfortable dry shave and a refreshing wet shave. Use it wet with shaving gel or foam for enhanced skin comfort.

Ease of use

- Washable shaver with QuickRinse system
- Three minute quick charge for one shave
- 45 shaving minutes, 1-hour charge
- Perfect for trimming your sideburns and moustache

Also use wet for enhanced skin comfort

- Aquatec: refreshing wet shave with foam or an easy dry shave

Shave smooth

- ComfortCut blades glide gently for a smooth, close shave

Protect your skin

- Glides smoothly over the curves of your face

Highlights

Aquatec wet and dry



The Aquatec seal on the shaver makes it 100% waterproof. Use it in the shower with your favourite shaving gel or foam for extra skin protection. Naturally, you can also shave dry for convenience. When you have finished, simply pop the heads open and rinse under the tap to easily clean your shaver.

Fully waterproof



With QuickRinse system to clean under the tap and can be used under the shower.

Skin protection system



Rounded low-friction protection heads adjust to the curves of your face to limit skin damage.

Pop-up trimmer




Complete your look by using the pop-up trimmer. Perfect for maintaining a moustache and trimming sideburns.

Quick charge for 1 shave



3-minute quick charge provides enough power for one shave, so that you are always fast even when the battery is empty

45+ Shaving Minutes

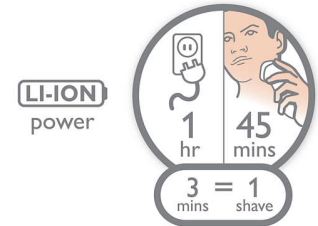

An energy-efficient, powerful lithium-ion battery gives you more shaves per charge. You'll have up to 45 minutes of shaving time – that's around 15 shaves – after 1 hour of charging. Plug it in for 3 minutes and you'll have enough power for one shave.

ComfortCut blades



ComfortCut blades have rounded edges that glide smoothly on your skin, so you always get a close – yet comfortable – shave.

Specifications

Accessories

Maintenance: Cleaning brush, Protective cap

Pouch: Soft pouch

Power

Battery Type: Lithium-ion

Automatic voltage: 100-240 V

Stand-by power: < 0.25 W

Maximum power consumption: 5.4 W

Design

Handle: Easy grip

Service

Replacement head: HQ8 has been replaced by SH50

Guarantee: 2 year guarantee

Replacement heads: Replace every 2 yrs with SH50 (these have replaced HQ8)

Shaving Performance

Contour following: Dynamic Contour Response

SkinComfort: Aquatec Wet and Dry, SkinProtection System

Shaving system: DualPrecision heads, Super Lift and Cut

Styling: Integrated pop-up trimmer

Ease of use

Display: 1 LED indication, Battery full indication, Battery low indication, Charging indication, Quick charge indication

Wet and Dry

Cleaning: Fully waterproof, QuickRinse hair chamber

Shaving time: 45+ minutes, up to 15 shaves

Operation: Rechargeable battery, Cordless use

Charging time: 1 hour, 3 min quick charge for 1 shave

Display indicates: Battery low, Charging, Battery full

