




Philips Hairclipper series  
7000  
Hair clipper with  
motorised combs

Self-sharpening stainless steel  
blades

60 length settings 0.5 - 42 mm  
120 mins cordless use/1 hr charge

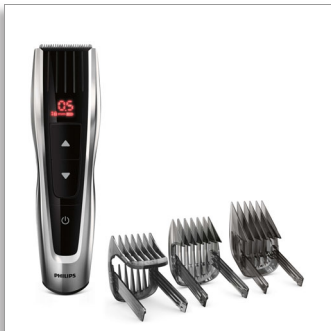

HC7460/13

## 1 click, total precision

with Motorised Combs

HAIRCLIPPER Series 7000 gives you total precision and complete control of your haircut with just one click. With motorised combs and a high-performance cutting element, it's the only clipper that consistently gives the results you expect.

### Easy to use

- Remembers the last used length setting
- Up to 120 minutes of cordless use

### Performance

- Self-sharpening steel blades for long-lasting sharpness
- Motorised Combs for easy length selection
- Effortlessly adapts to thick hair
- Double-sharpened cutting element cuts twice as fast\*
- Warranty for purchase protection

### Ultimate precision and control

- Control buttons
- Easy to select and lock in 60 length settings: 0.5 to 42 mm
- Adjustable hair combs for the best clipping results

# PHILIPS

Hair clipper with motorised combs  
Self-sharpening stainless steel blades 60 length settings 0.5 - 42 mm, 120 mins cordless use/1 hr charge

HC7460/13

# Highlights

## Control buttons

The intuitive user interface gives you precise feedback on the selected length. Use the buttons to easily select and lock in more than 60 length settings. Quickly browse through lengths or slowly go through each small step of 0.2 mm.

## 60 lock-in length settings



Use the Control Buttons to precisely select and lock in the length you want, with more than 60 length settings. Use the comb to trim with precisely 0.2 mm increments between 1 and 7 mm, and 1 mm between 7 and 42 mm. Or you can use it without the comb for a close 0.5 mm trim.


## 3 adjustable hair combs



The clipper comes with 3 adjustable hair combs: from 1 to 7 mm, 7 to 24 mm and 24 to 42 mm. Just attach one of the combs for more than 60 lock-in length settings, with precisely 0.2 mm increments between 1 and 7 mm, and 1 mm between 7 and 42 mm. Or you can use

the clipper without the comb for a close 0.5 mm trim.

## Stainless steel blades

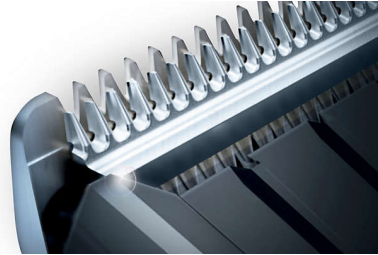

Self-sharpening stainless steel blades for long-lasting sharpness.

## Motorised Combs




The motor-powered length setting system easily selects and locks in the preferred length. The motor powers the comb and allows selecting between lengths with a precision of up to 0.2 mm. This innovative technology gives you the security of clipping all the time at the desired length and achieving consistent results time after time.

## Auto Turbo



The Auto Turbo feature automatically adapts to thicker hair, giving a little boost of extra power for an effortless cutting motion.

## DualCut Technology

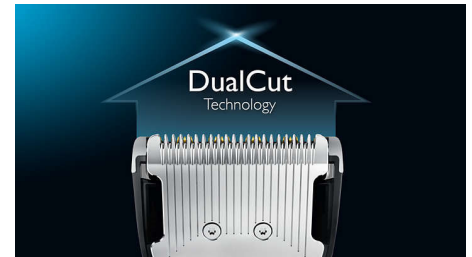

Power through any hair type with our advanced DualCut Technology, which combines a double-sharpened cutting element with low-friction engineering. The innovative cutting element is designed to cut hair twice as fast as regular Philips clippers, with the added confidence of a robust steel guard for ultimate durability.

## Remembers last length setting



The comb goes back to the last used cutting length setting when the clipper is turned on.

## Powerful cordless use



Don't get tangled up in your cordless hair clippers – a 1 hour charge provides up to 120 minutes of powerful clipping time. Or keep it plugged in for uninterrupted trimming.

Hair clipper with motorised combs  
Self-sharpening stainless steel blades 60 length settings 0.5 - 42 mm, 120 mins cordless use/1 hr charge

HC7460/13

# Specifications

## Power system

- Motor: Auto Turbo
- Battery type: Li-Ion
- Operation: Corded and cordless
- Running time: 120 minutes
- Charging time: 1 hour

## Accessories

- Attachments: 3 hair combs

## Service

- 2-year worldwide guarantee

## Cutting system

- Cutter width: 41 mm
- Cutting element: Stainless steel blades
- Number of length settings: 60
- Range of length settings: From 0.5 to 42 mm
- Precision (size of steps): 0.2 mm/1 mm
- Length selection: Control Buttons, Motorised Combs

## Ease of use

- Maintenance-free: No oil needed
- Cleaning: Removable cutter
- Memory function



Issue date 2024-02-16

Version: 1.0.1

EAN: 87 10103 71585 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Versus its Philips predecessor