

# PHILIPS

Dry electric shaver

Shaver series 5000  
PowerTouch

DualPrecision Flexing heads

50 min cordless use/1h charge

Pop-up trimmer

PT860/20



## DualPrecision

### Catches more hairs

PowerTouch adds power to your morning. Now with more minutes per charge, fully washable heads and DualPrecision blades - that give you a cleaner shave. With PowerTouch you'll always fly through your morning routine.

#### **A comfortable and close end result**

- Perfect for trimming your sideburns and moustache
- Flex & Float adjusts to face and neck curves
- DualPrecision heads shave long hairs and short stubble
- Super Lift & Cut blades raise hairs to cut closer

#### **The fastest way through your morning routine**

- Simply rinses clean
- LED Display
- 50+ shaving minutes, 1-hour charge
- Can be used corded and cordless

# Highlights

## DualPrecision blades



DualPrecision blades comfortably shave both long hairs and short stubble. 1. Slots cut long hairs. 2. Holes cut stubble.

## Flex & Float



Automatically adjusts to every curve of your face and neck for a smoother shave.

## 50+ shaving minutes



An energy-efficient, powerful and long-lasting lithium-ion battery gives you more shaves per charge. Charge it for an hour, and you'll have

50+ minutes of shaving time - that's around 17 shaves. Charge it for 3 minutes and you'll have enough power for one shave.

## Super Lift & Cut action




The first blade raises each hair while the second blade comfortably cuts below skin level, for really smooth results.

## Pop-up trimmer



Complete your look by using the pop-up trimmer. Perfect for maintaining a moustache and trimming sideburns.

## Efficient power System

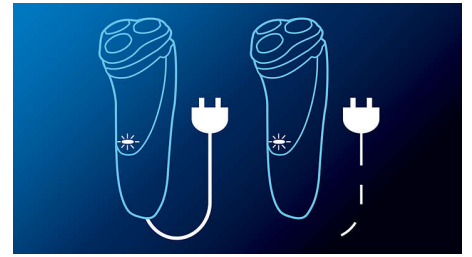

Can be used corded and cordless

## Fully washable shaver



Simply pop the heads open, and rinse thoroughly under the tap.

## LED Display

Indicates: Battery full, Battery low, Charging, Replace shaving heads, Quick charge



# Specifications

## Accessories

**Maintenance:** Cleaning brush, Protective cap

## Power

**Battery type:** Lithium-ion

**Automatic voltage:** 100–240 V

**Stand-by power:** < 0.25 W

**Max power consumption:** 5.4 W

## Design

**Color:** Icy silver

**Handle:** Ribbed rubber grip, Anti-slip, Ergonomic Easy Grip

**Finishing:** Hi gloss plastic front shell, Plastic deco ring

## Service

**Replacement head:** HQ8 has been replaced by SH50

**Guarantee:** 2-year guarantee

**Replacement heads:** Replace every 2 yrs with HQ8

## Shaving Performance

**Shaving system:** Super Lift&Cut, DualPrecision heads

**Contour following:** Flex & Float System

**Styling:** Integrated pop up trimmer

## Ease of use

**Display:** 2 LED indicator

**Cleaning:** Fully washable, QuickRinse hair chamber

**Shaving time:** 50+ minutes, up to 17 shaves

**Operation:** Corded and cordless, Rechargeable battery

**Charging time:** 1 hour, 3 min quick charge for 1 shave

**Display indicates:** Battery full, Battery low, Charging, Replace shaving heads, Quick charge

