

PHILIPS

Waterproof shaver & styler

StyleShaver

0.5 mm intervals

Dual sided trimmer

50 mins' cordless use/4-hr charge

Dual foil shaver

QS6141/33



Create your style

Trim, style, shave – create your style

Create your style with the Philips Styleshaver. At the flip of your wrist, this dual-ended beard styler and shaver has everything you need to create any style from perfect stubble, a styled beard or a clean shave.

Easy to use

- Beard comb ensures a perfectly even trim
- Easy to select and secure length settings
- Shows the battery status
- Foldable stand for convenient charging and storage
- 2-year guarantee, worldwide voltage, no oil needed

Performance

- Sharper trimmer cuts hair more efficiently
- 50 mins' cordless power after 4 hours' charge

Skin-friendly performance

- Allows you to shave wet and dry

Shave, Trim, Style

- New foil shaver: Shaves 20% faster than before
- 32-mm or 15-mm full metal trimmer for perfect details
- Beard and stubble trimmer: 12 length settings from 0.5-10 mm

Highlights

Beard and stubble trimmer



The full metal trimmer (32 mm) and the comb with 12 adjustable length settings makes it easy to get exactly the beard length you want. Lock in your perfect length setting with the zoom wheel. The durable metal trimmer with skin-friendly rounded edges guarantees a precise and even trim.

New Dual Foil Shaver



The new dual foil shaver makes it easy to shave around your style. The mid-trimmer catches longer, tougher hairs and the 2 floating foils shave everything else perfectly smooth.

Dual sided trimmer



Take off the adjustable comb and there's a full metal, dual sided trimmer underneath. Use the 32-mm side for a high-performance trim and the 15-mm side for precise detailing work in those hard to reach places. The rounded tips ensure a smooth touch to your skin. The finer cutting elements deliver a


close trim with perfect results — excellent for small details or areas like under your nose or around your mouth.

AquaTec - Wet and Dry



For extra skin protection and optimal shaving results, use wet with gel or foam, it can also be used dry for convenience. And when you're done, just rinse the product under the tap to clean it.

Lithium-Ion battery power

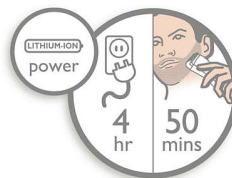

The Lithium Ion battery delivers up to 50 mins of powerful cordless use and is fully charged in only 4 hours.

Zoom wheel



Zoom wheel makes it easy to adjust the comb in the 12 length settings. The settings offer ultimate precision of 0.5-mm steps on the shorter lengths to define exactly the style you want, between a 5 o'clock shade and 3 days' stubble. Also, for longer beards, it offers exactly the lengths you need in 1-mm step sizes.

Battery light



The light is continuously lit to indicate a full battery, and blinks orange when you have about 10 minutes of usage left.

Foldable charging stand



The foldable charging stand gives you convenience at home and flexibility when travelling.

Beard comb

The design of the beard comb gives you more control, allowing you to always trim your beard evenly.

Built to last



All of our grooming products are built to last. They come with a 2-year worldwide guarantee and worldwide voltage compatibility, and they never need to be oiled.

Specifications

Ease of use

Display: Battery light

Cleaning: Fully washable

Operation: Rechargeable battery, Cordless use

Battery Runtime: 4-hour charge 50 mins' runtime

Accessories

Maintenance: Cleaning brush

Design

Finishing: Sturdy

Colour: Silver and Orange

Power

Automatic voltage: 100-240 V

Battery Type: Lithium-ion

Precision

Length Settings: 12 Lengths from 0.5 mm to 10 mm

Service

2 year guarantee

Replacement Foil: Replace every year with QS6101

Categorisation PC

Grooming: Styleshaver

