

# PHILIPS

Wet and dry electric shaver

Shaver 9800

Pressure Guard sensor

Dual Steel Precision blades

ComfortGlide Rings

360° Contour heads



S9987/85



## Superior closeness\*, personalised skin comfort with SenseIQ Technology

Philips Shaver 9800 delivers a smooth shave while reducing skin irritation. Only Philips has ComfortGlide rings, a special anti-friction coating to protect your face from redness and irritation.

### A close shave

- Helps you to shave with optimal pressure
- Maintains skin contact for a comfortable, smooth shave
- ComfortGlide rings protect your face from irritation

### For a convenient shave

- OLED display for dynamic SkinIQ and shaver notifications
- Even up your moustache and sideburns
- Get a convenient dry shave or a refreshing wet shave
- Charging stand
- Keep your shaver like new with a deep clean in just 1 minute
- 60 minutes of cordless shaving from a 1 hour charge

### SenseIQ technology

- Guides you to an improved technique with fewer passes
- Master your technique with the Philips GroomTribe app
- Advanced precision for a close shave\*


# Highlights

## Pressure Guard sensor




Using the right pressure is key for closeness and skin protection. Advanced sensors in the shaver read the pressure you apply, and the innovative light signal shows when you are pressing too hard or too little. For a personalised shave that is just right for you.

## Dual SteelPrecision blades

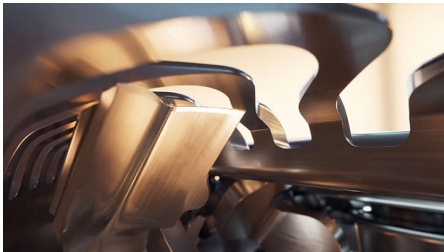

With up to 150.000 cutting actions per minute, the Dual SteelPrecision blades shave close. The 72 high-performance blades are self-sharpening and made in Europe.

## Smart Hair sensor

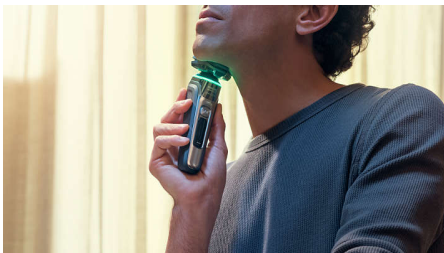

The intelligent sensor reads facial hair density 500 times per second and auto-adapts cutting power for an effortless and gentle shave.

## Motion Control sensor



Motion-sensing technology tracks how you shave and guides you to the optimal movements. After just three shaves, the majority of men achieved a better shaving technique for fewer passes\*\*.

## Personalisation via app



Pair your Philips electric shaver to the GroomTribe app and prepare to master your technique. Just track your progress and personalise your routine to achieve a shave that's both close and kind.

## ComfortGlide rings



Shaving heads are surrounded with ComfortGlide rings, a special protective coating with skin gliding properties, to shield your face from irritation\*\*\*.

## 360° contour heads



Fully flexible heads turn 360° to follow your facial contours. Experience optimal skin contact for a thorough and skin-friendly shave.

## Advanced OLED display



The first Philips shaver with a dynamic OLED display reveals every shaver feature and notification with sharp, fluid animation. The intuitive interface includes SkinIQ guidance, battery status, cleaning advice and more.

## Shave wet and dry



Get a convenient dry shave or a more refreshing wet shave with gel or foam - even in the shower.

# Specifications

## Accessories

### Charging stand

**Quick Clean Pod:** Yes, 1 cartridge included

**Integrated pop-up trimmer**

**Travel and storage:** Travel case

## Software

**Software update:** Philips offers relevant software updates for a period of 2 years after the date of purchase

**App:** Connects via Bluetooth®  
, GroomTribe

**Smartphone compatibility:** iPhone and Android™ devices

## Power

**Charging:** 1 hour full charge, 5-min quick charge

**Automatic voltage:** 100-240 V

**Battery type:** Li-Ion

**Run time:** 60 minutes

**Stand-by power:** 0.04 W

**Max power consumption:** 9 W

## Design

**Handle:** Rubber grip

**Colour(s):** Dark chrome

**Shaving heads:** Angular

## Service

**2 year warranty**

**Replacement head SH91:** Replace every 2 yrs with SH91

## Shaving Performance

**Contour following:** 360° Contour heads

**Shaving system:** Dual SteelPrecision blades

**SenseIQ technology:** ComfortGlide rings, Motion Control sensor, Smart Hair sensor

## Ease of use

**Display:** Advanced OLED display, Pressure guidance, Motion control indicator, Battery level indicator, Travel lock

**Wet and Dry:** Wet and dry use

**Cleaning:** One-touch open, Fully washable



\* versus predecessor Philips Series S9000

\*\* Based on Philips Series S7000 and GroomTribe app users in 2019

\*\*\* Compared to non-coated material

\*\*\*\* comparing shaving debris after using cleaning fluid vs. water in the cartridge