



Philips Hairclipper series
5000
Hair clipper with titanium
blades & 4 combs

Titanium blades for fast, sharp cut

24 length settings 0.5 - 23 mm
3 beard combs, 1 hair comb, hard
case
90 mins cordless use/1 hr charge



HC5450/83

HAIRCLIPPER Series 5000 - Cuts twice as fast*

with DualCut technology for a faster, sharper cut

The HAIRCLIPPER Series 5000 is built to last and engineered to perform. The innovative cutting element, durable titanium blades and adjustable beard and hair combs are designed to give you a fast, sharp cut, time after time.

Easy to use

- 'Quick release' blades for easy cleaning
- 90 minutes of cordless use after a 1-hour charge

Performance

- Extra-sharp blades for an extra-sharp result
- Double-sharpened cutting element with reduced friction
- Turbo power button boosts cutting speed

Precise length control

- Easy to select and lock in 24 length settings: 0.5 to 23mm
- Includes 1.5, 3 and 5mm combs for the perfect beard

Built to last

- 2-year guarantee plus 3 years when you register the product online
- The blades never need oiling
- Hard case for reliable storage

PHILIPS

Hair clipper with titanium blades & 4 combs

Titanium blades for fast, sharp cut 24 length settings 0.5 - 23 mm, 3 beard combs, 1 hair comb, hard case, 90 mins cordless use/1 hr charge

Highlights

DualCut Technology



Power through any hair type with our advanced DualCut Technology, which combines a double-sharpened cutting element with low-friction engineering. The innovative cutting element is designed to perform time after time, cutting hair twice as fast as standard Philips clippers, with a robust stainless steel guard for ultimate durability.*

Titanium blades




Get a perfect yet protective trim with the self-sharpening titanium-coated steel blades, created for long-lasting performance, time after time.

24 lock-in length settings



Turn the zoom wheel to simply select and lock in the length you want, with 23 length settings from 1 to 23 mm and precisely 1 mm between each length. Or you can use it without the comb for a close 0.5 mm trim.

Corded and powerful cordless use

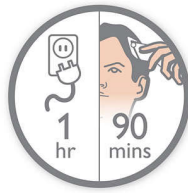


Use the clipper corded or cordless for maximum power and freedom, with 90 minutes of cordless power after 1 hour of charging.

Turbo boost



The turbo power button boosts cutting speed for a perfect cut even on the thickest hair.

Easy to clean

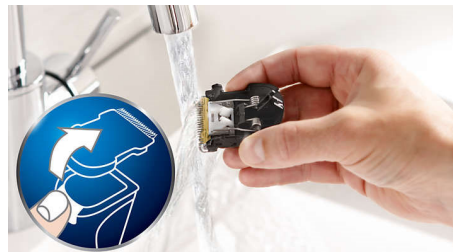

Simply click open the detachable head to quickly release and wash the blades.

5-year worldwide warranty



All of our grooming products are built to last. They come with a worldwide guarantee and

HC5450/83

worldwide voltage compatibility. Simply register your clipper at www.philips.com/5years to receive an additional 3 years on top of your standard 2-year Philips guarantee, giving you a 5 year worldwide warranty in total.

Bonus 1.5-, 3- and 5-mm beard combs



Use your Philips hair clipper to style your beard. It comes with 3 dedicated beard comb attachments to give you the complete style you want.

Hard storage case



Your clipper comes with a reliable hard case for complete durability, to ensure it is kept in optimum condition for ultimate power and precision, time after time.

No oil needed



No oil needed, for easy maintenance and to save you time.



Hair clipper with titanium blades & 4 combs

Titanium blades for fast, sharp cut 24 length settings 0.5 - 23 mm, 3 beard combs, 1 hair comb, hard case, 90 mins cordless use/1 hr charge

Specifications

Cutting system

- Cutter width: 41 mm
- Cutting element: Titanium blades
- Number of length settings: 24
- Range of length settings: From 0.5 to 23 mm
- Precision (size of steps): By 1 mm

Ease of use

- Cleaning: Washable blades

Power system

- Charging time: 1 hour(s)
- Battery type: Ni-MH
- Operation: Corded and cordless
- Running time: 90 minutes

Ease of use

- Maintenance-free: No oil needed

Service

- 2-year worldwide guarantee: Yes, Plus 3 years with registration

Cutting system

- Precision beard comb: 1.5 mm beard comb, 3 mm beard comb, 5 mm comb

Storage

- Case: Hard case



Issue date 2022-06-02

Version: 9.0.1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Versus its Philips predecessor