

PHILIPS

Special Edition BB-8 Men's
Electric Shaver

Shaver series 5000

BB-8 inspired shaver

ComfortCut blades give a close
shave

100% waterproof for a wet or dry
shave

SW5700/07



Fast, close shave

Wield the force!

Master true comfort. Discover a smooth shave. Our ComfortCut blades with rounded-profile heads glide smoothly over your skin for a protective shave.

Easy to use

- 50 minutes of cordless shaving
- 1 hour charging time
- Shaver can be rinsed clean under the tap
- 2 year guarantee, worldwide voltage and replaceable blades

A comfortable and close end result

- Rounded edges move smoothly over skin for a protective shave
- Heads flex in 5 directions for a fast, close shave
- Get a comfortable dry or refreshing wet shave with Aquatec
- 27 rotating blades capture and cut hair from all angles

Get the most out of your shaver

- Click-on trimmer for perfect moustache and sideburn trimming

Highlights

ComfortCut Blade System




Get a comfortable shave, wet or dry. Our ComfortCut blades with rounded profile heads glide smoothly across your skin while protecting it from nicks and cuts.

27 self-sharpening blades



27 self-sharpening blades. 56000 cuts per minute. Zero hairs left standing—no matter which direction they're growing in.

5 direction Flex Heads

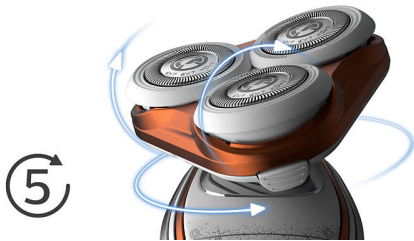


5 direction Flex Heads with 5 independent movements ensure close skin contact for a fast and close shave even on the neck and jaw line.

Aquatec Wet & Dry



Choose how you prefer to shave. With the Aquatec Wet & Dry seal, you can opt for a quick yet comfortable dry shave. Or you can shave wet – with gel or foam – even under the shower.

50 minutes of cordless shaving

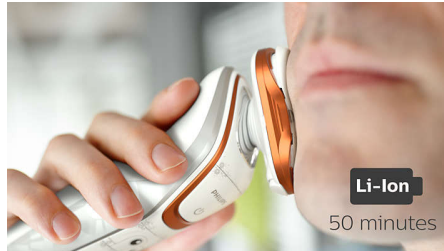

You'll have 50+ minutes of running time – that's about 17 shaves – on a one hour charge. This shaver only operates in cordless mode.

1 hour charging time



Shave longer with every charge, thanks to our powerful energy-efficient, long-lasting lithium-ion battery. Do a quick charge for 5 minutes and you'll have enough power for one shave.

SmartClick precision trimmer



Click on our skin-friendly precision trimmer to finish your look. It's ideal for maintaining your moustache and trimming your sideburns.

One-touch open



Simply pop the heads open and rinse thoroughly under the tap.

Built to last



All of our shavers come with a 2 year worldwide guarantee and can adapt to any voltage. The long-lasting blades only need to be replaced after 2 years.

Specifications

Accessories

SmartClick: Precision trimmer

Maintenance: Protective cap

Power

Run time: 50 min / 17 shaves

Charging: 1 hour full charge, Quick charge 5 min for 1 shave

Battery Type: Lithium-ion

Automatic voltage: 100-240 V

Stand-by power: 0.1 W

Max power consumption: 9 W

Design

Colour: Star Wars BB-8

Handle: Ergonomic grip and handling

Service

Replacement head: Replace every 2 yrs with SH50

2 year guarantee

Shaving Performance

Contour following: 5 direction Flex Heads

SkinComfort: SkinProtection System, Aquatec Wet and Dry

Shaving system: ComfortCut Blade System, 27 self-sharpening blades

Ease of use

Wet and Dry: Wet and dry use

Cleaning: Fully washable

Operation: Cordless use, Unplug before use

