

PHILIPS



Beard trimmer

Beardtrimmer series 3000

PowerAdapt Sensor

Titanium-coated Blades

60 min cordless use/1h charge

Lift & Trim system



BT3235/15

Effortless even trim

Lift & Trim system cuts 30% faster*

This trimmer with the innovative Lift & Trim system lifts and captures more low-lying hairs for efficient, even trimming results. This way you will easily achieve the 3-day stubble, short beard or long beard look you want.

Easy to use

- Longer lasting battery
- 90 minutes of cordless use or plug it in
- Simple maintenance
- Easy to grip
- Store and go
- Adjusts to different length settings
- Lights indicate when battery is low, empty, full or charging

Easy even trimming

- Trims evenly and captures low-lying hairs
- Skin-friendly blades for smooth skin
- Click-on precision trimmer for perfect edges and details
- PowerAdapt sensor for constant trimming performance
- Superior cutting performance with titanium-coated blades

Built to last

Beardtrimmer series 3000

Beard trimmer


BT3235/15

Highlights

PowerAdapt Sensor

The PowerAdapt Sensor checks the hair density of your beard 125 times per second and automatically adapts the motor to maintain constant cutting performance.

Lift & Trim system

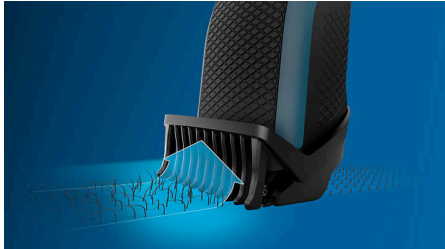

Perfect for stubble, the Philips beard trimmer features our new Lift & Trim system: a comb that lifts and guides the hairs to the level of the blades for an even trim.

Titanium blades



Get a perfect yet protective trim, time after time. The trimmer's titanium-coated steel blades lightly brush against one another, sharpening themselves as they trim so they stay extra sharp and effective as on day 1.

DuraPower technology




This beard trimmer uses DuraPower technology to reduce friction on the blades, preserve the motor, and keep your battery going four times longer.

Skin-friendly blades



Designed to prevent scratches and irritation, the blades have rounded tips for smoother skin contact.

Precision trimmer

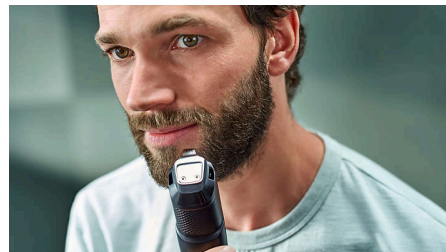

Trim your moustache or define details and edges in hard to reach areas with the click-on precision trimmer.

Precision Dial - 20 settings



An effective beard trimmer that cuts to the exact length you're after. Just spin the zoom wheel to one of 20 length settings between 0.5 and 10mm in 0.5mm increments.

90 min corded/cordless use



Charge your trimmer for 1 hour to get 90 minutes of cordless use or use it plugged in while charging. A 5-minute quick charge delivers one full trim.

Battery indicators



The battery indicators in this trimmer let you know what your battery status is: Low, empty, charging or full. This way, you can charge your trimmer on time and fully, so you won't end up with an empty battery in the middle of your trim.

Easy to clean



Detach the head of your Philips beard trimmer and rinse it under the tap for easy cleaning. Then dry it before you put it back on the appliance.

Beardtrimmer series 3000

Beard trimmer

BT3235/15

Highlights

Ergonomic design



A fast trimmer that's comfortable to hold and use. So you can handle those hard-to-reach areas more easily.

Built for durability



We back this Philips trimmer with a 3 year* worldwide warranty. You'll never need to oil it, and it's compatible with all worldwide voltages.

Travel and storage pouch



The included travel pouch keeps everything together when you're at home, at the gym or on-the-go.

Beardtrimmer series 3000

Beard trimmer

BT3235/15

Specifications

Create the look you want

Number of length settings: 20 integrated length settings

Accessories

Comb: Lift & Trim system

Pouch: Storage pouch

Maintenance: Cleaning brush

Detail trimmer included

Power

Automatic voltage: 100-240 V

Battery type: NiMH

Run time: 60 minutes

Charging: 1 hour full charge, 5 min quick charge

DuraPower technology: 4x longer battery life

Design

Handle: Ergonomic Easy Grip

Service

2-year warranty: Yes, Plus 1 year with product registration on Philips website

No oil needed

Cutting system

Cutting element: Titanium blades

Cutter width: 32 mm

Range of length settings: 0.5 up to 10 mm

Precision (size of steps): By 0.5 mm

Non-scratching teeth: For more comfort

Ease of use

Zoom wheel: Easily adjust length settings

Display: Battery low indicator, Battery empty indicator, Charging indicator, Battery full indicator

Cleaning: Rinseable attachments

Operation: Corded & Cordless use

