

Philips
do-it-yourself hair clipper

Stainless steel blades

20 length settings
60 mins' cordless use/1 hr charge
Precision buzz comb

QC5530/15

Cut your own hair - even in hard-to-reach areas

with the 180° rotating head

The unique 180° rotating head of this Philips hair clipper makes it easy to reach every part of your head, for an even trim every time. Give yourself a precise trim every time.

Easy to use

- Battery light shows the battery status
- 60 minutes of cordless power after a 1-hour quick charge.
- 100% waterproof for easy cleaning
- 2-year guarantee, worldwide voltage.

Skin-friendly performance

- Skin-friendly, high-performance trimmer blades
- Easy to select and lock in 20 length settings — 1 mm to 30 mm
- Contour-following comb follows every curve of your head.
- Precision comb with 5 locking length settings — 1 mm to 3 mm
- Precision trimmer for fine details to perfect your style

Do it yourself

- 180° rotating head for easy reach

PHILIPS

Highlights

20 locking length settings

Turn the wheel to simply select and lock in the length setting you want. Three adjustable combs provide length settings from 1 mm to 30 mm, with precisely 2 mm between each length on the main combs and 0.5 mm between each length on the precision comb. You can also use it without a comb for a close 0.5-mm trim.

Battery light

Battery light glows green when full and blinks orange when 10 minutes remain.

Follows every curve

The hair clipper gently follows the contours of your head for a fast, even and comfortable haircut.

Li-ion battery power

The powerful lithium ion battery lasts for 60 minutes after a 1-hour charge. A quick 10-minute charge gives you 10 minutes of clipping time, so it's always ready when you are.


Precision comb (Grooming 2012)

The additional comb gives you extra length settings from 1 mm to 3 mm, with precise 0.5 mm steps between each length.

Precision trimmer

Perfect for getting into hard-to-reach areas, like around your sideburns, under your nose or around your mouth. It's designed to cut very close while still protecting your skin. And its small size makes it easy to see what you're doing for fine lines and details.

180° rotating head

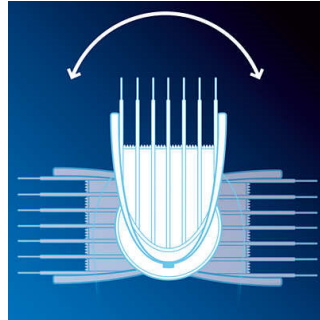

Makes trimming your own hair easier than ever. Simply select the best angle to comfortably reach all parts of your head without any assistance.

Skin-friendly high-performance



The steel blades of the electric shaver lightly brush against each other, so they sharpen themselves as you trim! The blades stay extra-sharp to always cut hairs neatly and effectively, but have rounded blade tips and combs to prevent skin irritation.

Built to last

All of our grooming products are built to last. They come with a 2-year worldwide guarantee and worldwide voltage compatibility.

100% waterproof

To clean, you can simply rinse this Philips groomer under the tap.

Specifications

Power system

- Battery type: Li-Ion
- Running time: 60 minutes
- Charging time: 1 hour
- Usage: Corded/cordless

Accessories

- Cleaning brush
- 3 guide combs

Design

- Shape: Ergonomic

Service

- 2-year worldwide guarantee

Cutting system

- Cutting element: Stainless steel blades
- Cutter width: 41 mm
- Number of length settings: 18
- Range of length settings: from 3 to 30 mm
- Precision (size of steps): By 2 mm mm
- Comb type: Contour following
- Small comb (3 to 15 mm)
- Big comb (18 to 30 mm)

Ease of use

- Zoom wheel
- Display: Charging indicator
- Adjustable guide combs
- Cleans under the tap

