

PHILIPS

Dry electric shaver

Shaver series 5000
PowerTouch

DualPrecision Pivoting heads

50 min cordless use/1 hr charge

Pop-up trimmer

PT870/17



DualPrecision

Catches more hairs

PowerTouch adds power to your morning. Now with more minutes per charge, fully washable heads and DualPrecision blades to give you a cleaner shave. With PowerTouch Plus you'll always fly through your morning routine.

A comfortable and close end result

- Perfect for trimming your sideburns and moustache
- DualPrecision heads shave long hairs and short stubble
- Pivot, Flex and Float
- Super Lift & Cut blades raise hairs to cut closer

The fastest way through your morning routine

- Simply rinses clean
- LED Display
- 50+ shaving minutes, 1-hour charge
- Can be used corded and cordless

Highlights

DualPrecision blades



DualPrecision blades comfortably shave both long hairs and short stubble. 1. Slots cut long hairs. 2. Holes cut stubble.

Pivot, Flex and Float



The heads flex to stay in close contact with your skin, and pivot to add an extra dimension of movement, all of which gives you a close, fast and comfortable shave.

50+ shaving minutes



An energy-efficient, powerful and long-lasting lithium-ion battery gives you more shaves per charge. Charge it for an hour, and you'll have

50+ minutes of shaving time - that's around 17 shaves. Charge it for 3 minutes and you'll have enough power for 1 shave.

Super Lift & Cut action



The first blade raises each hair while the second blade comfortably cuts below skin level, for really smooth results.

Pop-up trimmer




Complete your look by using the pop-up trimmer. Perfect for maintaining a moustache and trimming sideburns.

Fully washable shaver

Simply pop the heads open and rinse thoroughly under the tap.

Efficient power System

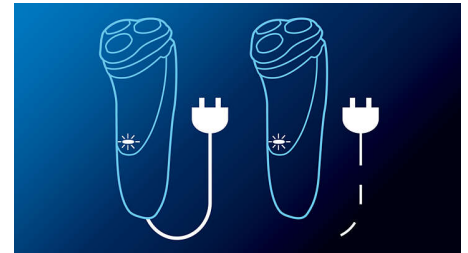

Can be used corded and cordless

LED Display



Indicates: Battery full, Battery low, Charging, Replace shaving heads, Quick charge



Specifications

Shaving Performance

Contour following: Pivoting and Flexing heads

Shaving system: Super Lift and Cut, DualPrecision heads

Styling: Integrated pop-up trimmer

Accessories

Maintenance: Cleaning brush, Protective cap

Ease of use

Display: 2-LED indicator

Cleaning: Quick rinse hair chamber, Fully washable

Operation: Corded and cordless, Rechargeable

battery

Shaving time: 50+ minutes, up to 17 shaves

Charging time: 1 hour, 3 min quick charge for 1 shave

Display indicates: Battery full, Battery low, Charging, Replace shaving heads, Quick charge

Design

Handle: Ribbed rubber grip, Anti-slip, Ergonomic Easy Grip

Finishing: NA

Colour: NA

Power

Automatic voltage: 100-240 V

Battery type: Lithium-ion

Stand-by power: < 0.25 W

Maximum power consumption: 5.4 W

Service

Guarantee: 2 year guarantee

Replacement head: HQ8 has been replaced by SH50

Replacement heads: Replace every 2 yrs with HQ8

