

# PHILIPS

Dry electric shaver

Shaver series 3000

DualPrecision blades

Flexing heads

PT735/16

## A closer, cleaner shave

The new Philips PowerTouch electric shaver adds power to your morning. Now with more minutes, full washability and Super Lift&Cut shaving performance, the shaver ensures that you are always ready to quickly finish your morning routine.

### **A comfortable and close end result**

- Super Lift & Cut system for a comfortably close shave
- DualPrecision cutting shaves even the shortest stubble
- Dynamic contour response adjusts to face and neck curves

### **The fastest way through your morning routine**

- 40+ minutes of cordless shaving, 8 hours charge
- Washable shaver with QuickRinse system

# Highlights

## Efficient Power System:40+ min




40+ minutes of cordless power for 14 shaves. Fully charges in 8 hours so it is always ready when you are

## Super Lift&Cut Action



The dual blade system built into our electric shaver lifts hairs to cut comfortably below skin level for a closer shave

## Dynamic contour response

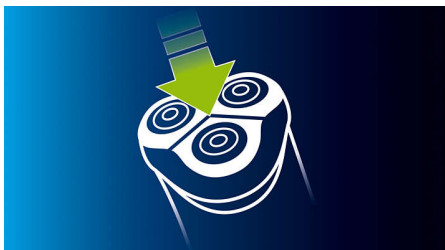


The shaver automatically adjusts to every curve of your face and neck for a smoother shave

## DualPrecision Cutting



DualPrecision shaving heads of the electric shaver have slots to shave the normal hairs and holes to shave even the shortest stubble

## Fully washable shaver

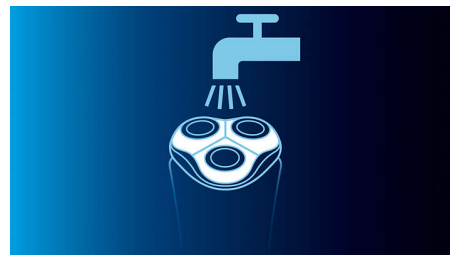

Fully washable electric shaver with QuickRinse system rinses clean in less time

# Specifications

## Accessories

Maintenance: Cleaning brush, Protective cap

## Power

Automatic voltage: 100-240 V  
Battery type: Lithium-ion  
Stand-by power: < 0.2 W  
Max power consumption: 5.4 W

## Design

Finishing: Hi gloss plastic front shell, Lacquered deco ring  
Handle: Easy grip, Rubber grip  
Color: Atlantic blue & silver

## Service

Replacement head: HQ8 has been replaced by SH50, Replace every 2 yrs with HQ8 2-year guarantee

## Shaving Performance

Shaving system: DualPrecision cutting, Super Lift&Cut  
Contour following: Dynamic contour response

## Ease of use

Charging: Rechargeable, Cordless & corded operation, Quick charge 3 min for 1 shave  
Display: 1 LED indication, Charging indication, Battery low indication, Battery full indication, Quick charge indication  
Cleaning: Fully washable shaver, Quick rinse hair chamber  
Shaving time: 40+ minutes  
Charging time: 8 hours

