



Reset your shaver to new

Replace every 24 months for a shaver like new

Within two years, your shaver heads cut 9 million hairs on your face. Replace the shaver heads and get back to 100% performance.

Easy to use

- Reset your shaver very simply
- Change heads every 24 months for the best performance

Compatibility

• For shavers series 8000, 9000 and 9000 Prestige

Performance

Skin-level closeness

Sustainability

Recyclable packaging*

Highlights

NanoTech DualPrecision Blades




NanoTech DualPrecision blades shave close precisely at skin level (up to -0.08 mm below the skin), performing up to 165,000 cutting actions per minute. The 72 high-performance blades are self-sharpening and made in Europe.

Compatibility



Check the back of your shaver's handle to confirm replacement head. Need help? Visit philips.com/accessories

Simple replacement

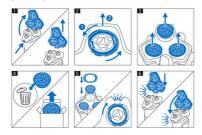

1. Press the release buttons and detach the shaving head holder. 2. Turn the retaining rings counterclockwise and remove them. 3. Remove

old shaving heads and insert replacement (notches should fit exactly onto the projections).

4. Place retaining rings back and turn them clockwise until you hear a click. 5. Insert the shaving holder back and close.

Reset your shaver to new



Replace the shaver heads every 24 months to ensure the best performance for your device.

Recyclable packaging*



At Philips we strive for sustainability in all aspects of product development. This packaging comes without plastic parts and is fully recyclable*.

© 2025 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2025-02-26 Version: 9.9.1

EAN: 87 10103 97891 6





* where facilities exist

Specifications

Shaving heads

Fits product type: Shaver series 8000, Shaver series 9000, Shaver series 9000 Prestige Shaving heads per packaging: 3