



Philips Norelco Shaver
series 9000
Wet and dry electric
shaver

V-Track Precision Blades

8-direction ContourDetectHeads
SmartClean System
SmartClick beard styler

Perfection in every pass

Cuts up to 20% more hair* in a single pass

Our most advanced shaving system, the Series 9000 cuts hairs up to 30% closer to skin with its V-Track precision blades*. The shaving heads, with contour detect technology, move in 8 directions to cut up to 20% more hair in a single pass*.

Easy to use

- 50 minutes cordless shaving from a one-hour charge
- Built to last with a full 2 year warranty

A comfortable shave

- Choose a comfortable dry or refreshing wet shave
- Personalize your shave
- Lifts each hair up for a closer cut

Designed for perfection

- The shaving system that gets 30% closer
- Shaving heads move in 8 directions for a smoother result

Get the most of your shaver

- SmartClean maintenance at the touch of a button
- Click-on beard styler with 5 length settings
- Convenient case for on-the-go

S9321/89

PHILIPS
NORELCO

Wet and dry electric shaver

V-Track Precision Blades 8-direction ContourDetectHeads, SmartClean System, SmartClick beard styler

S9321/89


Highlights

Contour Detect Technology




The Philips shaver is an electric shaver that delivers our closest shave ever*. Its Contour Detect technology gently follows your facial contours to capture 20% more hairs* in a single pass.

V-Track Precision Blades

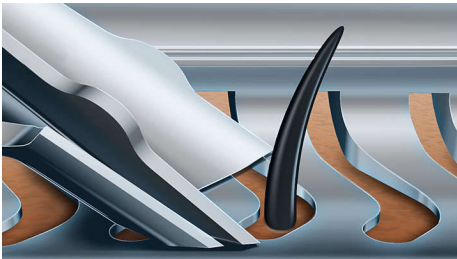

Not only do the V-Track Precision Blades give you a super-smooth shave that's 30% closer*, they're also self-sharpening for continued results day after day.

Personal Comfort Settings

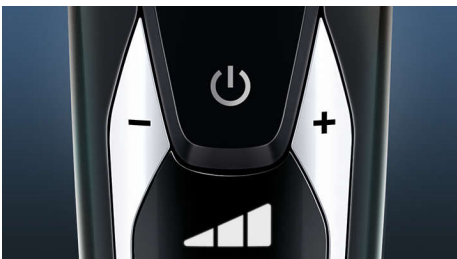

Choose between normal or sensitive to create a shaving experience that best suits your skin. If you're in a hurry, select the fast setting to save some time.

Shave Wet or Dry



The wet and dry shaver can be used to your preference. At the sink or in the shower, get a convenient dry shave or pair with your favourite foam or gel for a refreshing wet shave.

SmartClean System



The SmartClean System cleans, lubricates, dries, and charges your Philips shaver at the touch of a button. Keeping it performing at its best, day in and day out.

Super Lift & Cut Action



Twin blades of this precision shaver give you a supremely close shave. The first blade lifts the hair, while the second comfortably cuts below skin level, which gives you exceptionally smooth results.

SmartClick beard styler



Change your look with the SmartClick Beard Styler attachment. Choose from 5 length settings to create anything from a perfect stubble look to a short, neatly trimmed beard. Rounded tips and combs are designed to prevent skin irritation.

50 minutes of cordless shaving



Shave longer and more powerfully. With the long-lasting lithium-ion battery, 1-hour is enough time to fully charge your shaver, while the 5-minute power boost is enough for a single shave. It also operates cordlessly for safe use in the shower.

Travel case

The sleek design of the shaver storage case takes up less space and the built-in ventilation chamber dries your electric shaver even when you're on the go.

Wet and dry electric shaver

V-Track Precision Blades 8-direction ContourDetectHeads, SmartClean System, SmartClick beard styler

S9321/89

Specifications

Shaving Performance

- Shaving system: V-Track Precision Blade System, Super Lift & Cut Action
- Contour following: 8-direction ContourDetectHeads
- SkinComfort: AquaTec Wet & Dry
- Personal Comfort Settings: Sensitive-Normal-Fast settings

Ease of use

- Display: 5 level battery indicator, Cleaning indicator, Battery low indicator, Replace shaving heads indicator, Travel lock indicator
- Cleaning: Fully washable

Design

- Handle: Ergonomic grip & handling
- Color: Argus

Accessories

- Pouch: Travel pouch

- SmartClick: Beard styler
- SmartClean System: Charges, Cleaning cartridge (included), Cleans, Dries, Lubricates

Power

- Charging: Rechargeable, Charge 1 hour for 50 min use, Quick charge for 1 shave
- Run time: 50 min / 17 shaves
- Automatic voltage: 100-240 V
- Battery Type: Lithium-ion
- Stand-by power: 0.1 W
- Maximum power consumption: 9 W

Service

- 2-year guarantee
- Replacement head: Replace every yr with SH90

Software

- Software update: Philips offers relevant software updates for a period of 2 years after the date of purchase



Issue date 2022-07-23

Version: 2.1.1

EAN: 00 07502 00511 10

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Cuts up to 20% more hair - versus SensoTouch