

PHILIPS

Beard trimmer

Beardtrimmer series
3000

0.5mm precision settings

Stainless steel blades

60 min cordless use/1h charge

Lift & Trim system



BT3216/13



3-day beard made easy

Lift & Trim system cuts 30% faster*

This trimmer with the innovative Lift & Trim system lifts and captures more low-lying hairs for efficient, even trimming results. This way you will easily achieve the 3-day stubble, short beard or long beard look you want.

Easy to use

- Simple maintenance
- Easy to grip
- Store and go
- Cordless use for up to 60 mins
- Adjusts to different length settings
- Lights indicate when battery is low, empty, full or charging

Easy even trimming

- Trims evenly and captures low-lying hairs
- Get a perfect but protective trim
- Skin-friendly blades for smooth skin

Built to last

- Warranty for purchase protection

Highlights

Lift & Trim system



Perfect for stubble, the Philips beard trimmer features our new Lift & Trim system: a comb that lifts and guides the hairs to the level of the blades for an even trim.

Self-sharpening blades



The self-sharpening steel blades on the Philips 3000 beard trimmer stay as sharp and effective as on day 1 to deliver a perfect yet protective trim, time after time.

Skin-friendly blades



Designed to prevent scratches and irritation, the blades have rounded tips for smoother skin contact.

Precision Dial - 20 settings



An effective beard trimmer that cuts to the exact length you're after. Just spin the zoom wheel to one of 20 length settings between 0.5 and 10mm in 0.5mm increments.

60 min corded/cordless use




Don't get tangled up in your stubble trimmer – a 1 hour charge provides up to 60 minutes of cordless grooming time. Or keep it plugged in for uninterrupted trimming.

Battery indicators



The battery indicators in this trimmer let you know what your battery status is: Low, empty, charging or full. This way, you can charge your trimmer on time and fully, so you won't end up with an empty battery in the middle of your trim.

Easy to clean

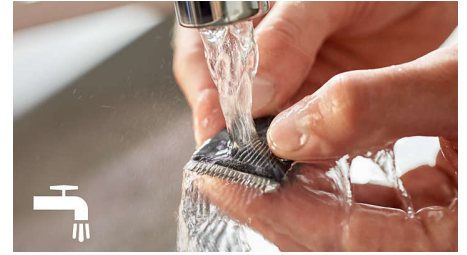

Detach the head of your Philips beard trimmer and rinse it under the tap for easy cleaning. Then dry it before you put it back on the appliance.

Ergonomic design



A fast trimmer that's comfortable to hold and use. So you can handle those hard-to-reach areas more easily.

Built to last

All of our grooming products are built to last. They come with a 2 year warranty, never need to be oiled and are compatible with any voltage worldwide.

Specifications

Create the look you want

Number of length settings: 20 integrated length settings

Accessories

Maintenance: Cleaning brush

Comb: Lift & Trim system

Pouch: Storage pouch

Power

Automatic voltage: 100-240 V

Battery Type: NiMH

Charging: 1 hour full charge

Run time: 60 minutes

Design

Handle: Ergonomic Easy Grip

Consumer Trade Item

Height: 22.4

Width: 14

Length: 7

Net Weight: .177

Gross Weight: .291

GTIN: 8710103844129

Country of origin: ID

Harmonized system code: 851020

Outer Carton

Height: 23.8

Width: 15.1

Length: 29.1

Gross Weight: 1.33

GTIN: 18710103844126

Service

2-year guarantee

No oil needed

Cutting system

Cutting element: Stainless steel blades

Cutter width: 32 mm

Range of length settings: 0.5 up to 10 mm

Precision (size of steps): By 0.5 mm

Non-scratching teeth: For more comfort

Ease of use

Cleaning: Rinseable attachments

Zoom wheel: Easily adjust length settings

Display: Battery low indicator, Charging indicator, Battery empty indicator

Operation: Corded & Cordless use

