

Philips
Wardrobe Care

GC9920



Breathes new life into your clothes

Integrated iron, steamer and refresher

The Wardrobe Care solution from Philips is a unique combination of an iron, a steamer and a refresher with an innovative ironing board. It helps you keep your and your family's clothes in beautiful shape and saves you time and money as well!

The ultimate ironing experience

- High-pressure steam iron
- Large heated board with NeverBurn cover
- Blowing setting prevents pressing marks
- Suction setting keeps fabric in place to avoid false creases

Refreshes jackets and jumpers; less dry-cleaning

- Auto-refresh mode creates a breeze to air your garments

Keeps your delicate garments in perfect shape

- High-pressure steamer and vertical board

Crease-free shirts quickly and easily

- Unique board with one end especially for shirts

Hassle-free scale removal

- Removes scale from your system automatically

PHILIPS

Highlights

High-pressure steam iron



High-pressure steam iron makes sure the steam goes deep into your garment for optimal and faster crease removal.

Large heated board with NeverBurn cover

The large heated board enables easier and more convenient ironing. The NeverBurn board cover is heat resistant, so you can rest your hot soleplate on the cover without the risk of burning or scorching. It also eliminates the inconvenience of repeated stress on your wrist when putting the iron on its heel.

Blowing

The blowing setting on the board creates an air cushion under the garment, allowing you to iron effortlessly and avoid button, pocket and shine marks.

Suction

The suction setting keeps garments in place while you are ironing, so you avoid accidentally ironing in creases.

Shirt-shaped board



One end of the board is specially designed for ironing shirts quickly and easily.



High-pressure steamer




The powerful steamer and vertical board mean you can remove creases from delicate fabrics without the risk of damaging them.

Refresher



Heated air from the board freshens your garments and reduces the need for dry-cleaning.

Auto Calc-Clean function

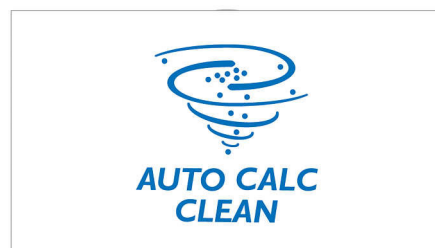

The Auto Calc-Clean function automatically cleans your ironing system of scale. A two-minute scale removal cycle is activated automatically when it is time to clean your system. All you have to do is empty the detachable rinse tank. It keeps your system as new and powerful as the day you bought it.

Specifications

Easy to use

- Safe in use: Safety shut-off
- Control: Blowing setting, Condensation management, Indicator to empty rinse tank, Suction setting, Temperature ready light, Water tank empty light
- Reaching tricky areas: Steam tip
- Water tank: Crystal clear, Detachable
- Easy to set up and store: Automatic cord winder, Easy storage compartments, Handle and wheels
- Ergonomics: Lightweight iron and steamer

Weight and dimensions

- Product weight: 20

Technical specifications

- Power: 2400
- Frequency: 50-60
- Voltage: 220 - 240

Service

- 2 year guarantee

Comfortable ironing

- Additional comfort: Assisted height adjustment, Standing or sitting ironing
- Anti-scale management: Auto Calc-Clean function
- Safe in use: Automatic shut-off when iron is left unattended
- Suitable for tap water
- Water tank capacity: 2500 ml

Crease removal

- Continuous steam
- Reaching tricky areas: Pointed tip
- Pressurised Steam: Up to 4.5 bar



Issue date 2022-06-03

Version: 1.0.1

EAN: 08 71010 32709 80

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com