



Philips Hairclipper series
5000
Hair clipper

75 min grooming
Precision: 3-41 mm

QC5345/15

More power, better haircuts

This powerful Philips hair clipper cuts even the thickest hair, thanks to its sharp steel blades and the most powerful lithium-ion battery on the market. One quick charge provides enough power for 75 minutes of cordless use.

Easy to use

- 2- year guarantee, worldwide voltage, no oil needed
- Battery light shows the battery status
- Simply rinse clean

Performance

- High-performance self-sharpening steel blades

More power, better haircuts

- Contour-following comb follows every curve of your head.
- 75 minutes of cordless power after 1 hour quick-charge.
- 21 locking length settings from 0.5mm to 41mm

PHILIPS

Hair clipper
75 min grooming Precision: 3-41 mm

Specifications

Cutting system

- Cutter width: 41 mm
- Number of length settings: 20
- Range of length settings: 3-41 mm
- Maintenance free - No Oil needed
- Precision (size of steps): By 2mm mm
- Self-sharpening stainless steel blades

Ease of use

- Display: Charging indicator
- Adjustable guide combs

Accessories

- Cleaning brush

Design

- Finishing: Metal chrome plate
- Easy grip: Side panels
- Shape: Ergonomic

Power system

- Battery type: Li-ion
- Running time: 75 minutes
- Charging time: 1 hour

Service

- 2-year worldwide guarantee

QC5345/15

Highlights

21 locking length settings

Two adjustable combs provide length settings from 3mm to 41mm, with precisely 2mm between each length. Or you can use it without a comb for a close 0.5mm trim.

Battery light

Battery light glows green when full and blinks orange when 10 minutes remain.

Built to last



All of our grooming products are built to last. They come with a 2 year worldwide guarantee, worldwide voltage compatibility, and they never need to be oiled.


Follows every curve

The hair clipper gently follows the contours of your head for a fast, even and comfortable haircut.

Li-ion battery power

The powerful lithium ion battery of the Philips hair clipper lasts for 75 minutes after a 1 hour charge. A quick 10 minute charge gives you 10 minutes of clipping time, so it's always ready when you are.

Self-sharpening steel blades

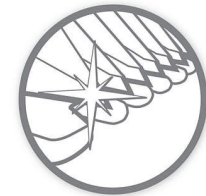

The steel blades of the electric shaver lightly brush against each other, so they sharpen themselves as you trim! The blades stay extra-sharp to always cut hairs neatly and effectively, but have rounded tips to protect your skin.

Washable

Simply pop the head open and you can thoroughly rinse it under the tap.



Issue date 2022-06-16

Version: 12.0.1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com