



Philips Hairclipper series
3000
Hair clipper

Stainless steel blades
11 length settings
40mins cordless use/8h charge

QC5135

Haircuts made easy

with one adjustable comb

The Philips hair clipper comes with 11 precision length settings from 0.5mm to 21mm, one adjustable comb and cordless or corded use - making hair cuts even easier.

Easy to use

- 2- year guarantee, worldwide voltage, no oil needed
- Battery light shows the battery status
- Pop open head makes it easy to clean with the added brush
- 40 minutes of cordless use after an 8-hour charge

Performance

- High-performance self-sharpening steel blades

Haircuts made easy

- 11 lock-in length settings from 0.5mm to 21mm
- One comb for all length settings

PHILIPS

Hair clipper

Stainless steel blades 11 length settings, 40mins cordless use/8h charge

Specifications

Cutting system

- Cutting element: Stainless steel blades
- Cutter width: 41 mm
- Number of length settings: 11
- Range of length settings: up to 21 mm
- Precision (size of steps): By 2mm mm
- Self-sharpening stainless steel blades
- Comb type: Regular
- Rounded tips: Skin friendly

Ease of use

- Charging indicator: 1 LED
- Maintenance free - No Oil need

Design

- Shape: Ergonomic

Accessories

- Cleaning brush

Power system

- Battery type: NiMH
- Running time: 40 minutes
- Charging time: 8 hours
- Usage: Corded/cordless

Service

- 2-year worldwide guarantee

QC5135/15

Highlights

11 lock-in length settings

The single adjustable comb provides length settings from 3mm to 21mm, with precisely 2mm between each length. Or you can use it without a comb for a close 0.5mm trim.

All-in-one comb

Choose from different length settings without the hassle of swapping combs.

Battery light

Battery light glows green when full.

Built to last



All of our grooming products are built to last. They come with a 2 year worldwide guarantee, worldwide voltage compatibility, and they never need to be oiled.


Easy to clean

Simply pop the trimmer head open and use the cleaning brush included to sweep away loose hairs.

Powerful cordless use

Use it cordless or corded. You'll have 40 minutes of cordless power after 8 hours of charging.

Self-sharpening steel blades

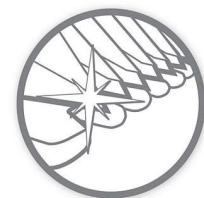

The steel blades of the electric shaver lightly brush against each other, so they sharpen themselves as you trim! The blades stay extra-sharp to always cut hairs neatly and effectively, but have rounded tips to protect your skin.



Issue date 2023-01-13

Version: 5.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com