



Philips Hairclipper series
5000
Hair clipper

Stainless steel blades
24 length settings
75mins cordless use/8h charge



HC5440/15

HAIRCLIPPER Series 5000 - Cuts twice as fast*

with DualCut technology for a faster, sharper cut

The HAIRCLIPPER Series 5000 is built to last, and engineered to perform. The innovative cutting element, stainless steel blades and adjustable hair comb are designed to give you a fast, sharp cut, time after time.

Easy to use

- 'Quick release' blades for easy cleaning
- 75 minutes of cordless use after an 8-hour charge

Performance

- Self-sharpening steel blades for long-lasting sharpness
- Double-sharpened cutting element with reduced friction

Precise length control

- Easy to select and lock in 24 length settings: 0.5 to 23mm


Built to last

- 2yr guarantee plus 3yrs when you register the product online
- The blades never need oiling

PHILIPS


Highlights

DualCut Technology

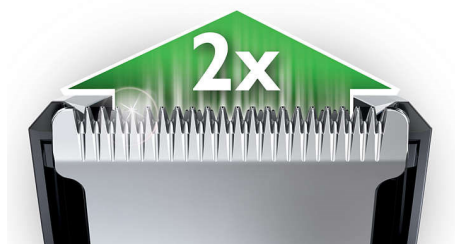

Power through any hair type with our advanced DualCut Technology, which combines a double-sharpened cutting element with low-friction engineering. The innovative cutting element is designed to cut hair twice as fast as regular Philips clippers, with the added confidence of a robust steel guard for ultimate durability.*

Stainless steel blades

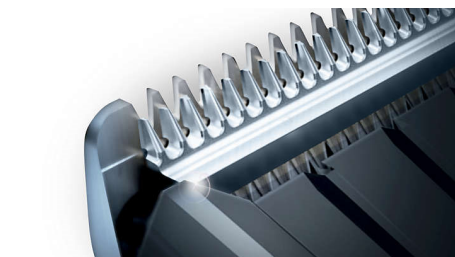

Self-sharpening stainless steel blades for long-lasting sharpness.

24 lock-in length settings



Turn the zoom wheel to simply select and lock in the length you want, with 23 length settings from 1 to 23mm, and precisely 1mm between each length. Or you can use it without the comb for a close 0.5mm trim.

Corded & powerful cordless use



Use the clipper corded or cordless for maximum power and freedom, with 75 minutes of cordless power after 8 hours of charging.

Easy to clean



Simply click open the detachable head to quickly release and wash the blades.

5-year worldwide warranty



All of our grooming products are built to last. They come with a worldwide guarantee and worldwide voltage compatibility. Simply register your clipper on www.philips.com/ 5years to receive an additional 3 years on top of your standard 2-year Philips guarantee, giving you a 5-year worldwide warranty in total.

No oil needed



No oil needed, for easy maintenance and to save you time.



Hair clipper

Stainless steel blades 24 length settings, 75mins cordless use/8h charge

HC5440/15

Specifications

Cutting system

- Cutter width: 41 mm
- Cutting element: Stainless steel blades
- Number of length settings: 24
- Range of length settings: From 0.5 to 23 mm
- Precision (size of steps): By 1 mm

Ease of use

- Cleaning: Washable blades
- Maintenance free: No oil needed

Power system

- Charging time: 8 hour(s)
- Battery type: Ni-MH
- Operation: Corded and cordless
- Running time: 75 minutes

Service

- 2-year worldwide guarantee: Yes, Plus 3-years with registration



Issue date 2023-01-14

Version: 10.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Versus its Philips predecessor