

PHILIPS

AVENT

Digital Video Baby Monitor

Baby monitor

Private and secure (A-FHSS)

2.7 inch (6.9 cm) colour screen

Soothing lullabies and talkback

 Product Picture

SCD620



Always close to your baby

Private and secure with A-FHSS technology

The Philips Avent SCD620 enables you to maintain a secure and private connection with your baby at all times. Hear your baby with perfect sound quality and also see your baby in crystal clear vision (2.7" LCD), whether it is day or night.

Private and secure connection

- High resolution 2.7" (6.9 cm) screen with crystal-clear night vision
- Energy-saving eco mode with connection indication
- Hear your baby with clear sound
- Private, secure connection with adaptive FHSS technology

Freedom, flexibility, comforting and soothing

- Excellent operating time for overnight monitoring
- Choose the best sound level for your surroundings
- Range up to 300 metres*
- Stay connected with talk back
- Comforting lullabies to calm your little one

Reliability and reassurance

- LED lights show you when your unit is linked and in range

Highlights

Private, secure and adaptive FHSS



Unique handset pairing for a private, secure connection to your baby. Combined with the new Adaptive FHSS (Frequency Hopping Spread Spectrum) technology for minimal interference.

2.7" colour screen

See your baby, day and night, with crystal-clear, infra-red night vision that automatically switches on in the dark. Enjoy your baby sleeping with the high-resolution, extra-large 2.7" (6.9 cm) colour screen.

Perfect clear sound video

Hear every tiny giggle, gurgle and hic-up with perfect clarity. Not only see but also hear your baby any time with high-quality, crystal-clear sound.


ECO mode

Switch on the ECO mode to reduce power consumption during quiet times in the baby's room, safe in the knowledge that you are still connected to your baby via the unique link indication. The ECO mode switches off the audio/video transmissions and the units only connect when the baby makes a sound.

Always connected

Always know when your monitor is in range and connected. The parent unit will alert you when your monitor is out of range or when the power is low, helping you make sure that you are always connected to your baby.

300m Range

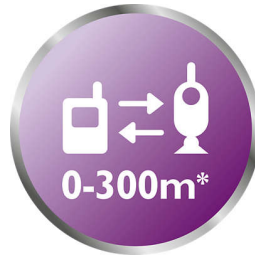

Indoor range up to 50 metres*, Outdoor range up to 300 metres*.

Operating time up to 10 hours



The convenient rechargeable parent unit will give you the freedom of cordless monitoring for up to 10 hours before recharging is required.

Talk back



Sometimes all your baby needs is the soothing sound of your voice. With one click of this essential feature you can connect with your baby from anywhere around the home.

Lullabies

There's nothing like a gentle lullaby to calm a restless baby. From any room in the house you can select one of 5 relaxing tunes to help your baby drift off to sleep in no time.

Sensitivity control

It allows you to set the microphone sensitivity of the baby unit. The microphone sensitivity determines what level of noise is picked up by the baby unit, e.g. you might want to hear when your baby cries, but you may be less interested in his or her babbling.

Specifications

Tuner/Reception/Transmission

Frequency band: 2.4 GHz

Convenience

Power on indication
Battery low indication
Auto out-of-range warning
Battery charging indication
Volume control
Sensitivity settings
Wall mountable

Power

Power supply: 100–240 V/50–60 Hz

Features

Languages: English
Digital Video Technology: Yes, adaptive FHSS
Video LCD Screen: 2.7" (6.9 cm) colour
Adjustable sound sensitivity
Adjustable viewing angle
Android, IOS, Tablet compatible: No
Audio only mode
Auto infrared night vision
Battery and mains operated baby unit: Mains only
Battery back-up function baby unit: No
Battery operating time parent unit: Superior up to 10 hours
Belt Clip
Brightness control
Comforting night light: No
Menu Style: Icons

Digital zoom and pan: No
Energy saving Eco mode: Eco mode with link indication
Handheld and rechargeable: Yes, parent unit
Indoor range up to: 50 m
Linked and in range indication
Low battery/lost connection alert
Lullabies: Yes, 5 x
Mini USB charging
Outdoor range up to: 300m
Private and secure: Yes, adaptive FHSS
Talkback function
Temperature sensor: No
Vibration mode: No
Voice activation screen: Yes, VOX mode
Battery- and mains-operated parent unit

