

# PHILIPS

wet & dry electric shaver  
with SmartClean system

Shaver series 5000

ComfortCut blade system

Precision trimmer & travel pouch

40 min cordless use/1 hr charge

SmartClean System

S5070/26



## Wet or Dry, Protective Shave

Protects 10 X better versus a regular blade

The AquaTouch shaver protects your skin while you enjoy a refreshing shave. Our ComfortCut Blade System with rounded profile heads glides smoothly across, and they're designed to protect your skin.

### Easy to use

- 40 minutes of cordless shaving
- 1 hour charging time
- 1 level battery and travel lock indicators
- 2 year guarantee, worldwide voltage and replaceable blades

### A comfortable and close end result

- Rounded profile of heads designed to protect skin
- Get a comfortable dry or refreshing wet shave with Aquatec
- Rounded edges move smoothly over skin for a protective shave
- Heads flex in 5 directions for a fast, close shave

### Get the most out of your shaver

- Click-on trimmer for perfect moustache and sideburn trimming
- Keep your shaver like new with SmartClean
- Includes cartridge for up to 3 months of convenient cleaning

# Highlights

## Skin Protection System



Shave closely without nicks and cuts. Our ComfortCut Blade System with rounded head profile glides smoothly across, while protecting your skin.

## Aquatec Wet & Dry



Choose how you prefer to shave. With the Aquatec Wet & Dry seal, you can opt for a quick yet comfortable dry shave. Or you can shave wet – with gel or foam – even under the shower.

## ComfortCut Blade System



Get a comfortable shave, wet or dry. Our ComfortCut blades with rounded profile heads glide smoothly across your skin while protecting it from nicks and cuts.

## 5 direction Flex Heads



5 direction Flex Heads with 5 independent movements ensure close skin contact for a fast and close shave even on the neck and jaw line.

## SmartClick precision trimmer


Click on our skin-friendly precision trimmer to finish your look. It's ideal for maintaining your moustache and trimming your sideburns.

## SmartClean System



At the touch of a button, SmartClean cleans, lubricates and charges your shaver, keeping it performing at its best.

## 40 minutes of cordless shaving

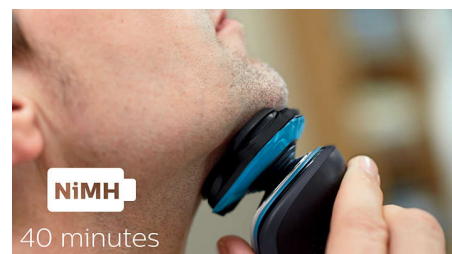

You'll have 40+ minutes of running time – that's about 13 shaves – on a one-hour charge. This shaver only operates in cordless mode.

## 1 hour charging time



Shave for longer with every charge, thanks to our powerful energy-efficient, long-lasting battery. Do a quick charge for 5 minutes and you'll have enough power for one shave.

## LED display



The intuitive display shows relevant information, enabling you to get the best performance out of your shaver: - 1 level Battery Indicator - Battery Low Indicator - Travel Lock Indicator

## Built to last



All of our shavers come with a 2 year worldwide guarantee and can adapt to any voltage. The long-lasting blades only need to be replaced after 2 years.

# Specifications

## Accessories

**SmartClick:** Precision trimmer

**Pouch:** Travel pouch

**SmartClean:** Cleans, Charges, Lubricates,  
Cleaning cartridge (included)

## Power

**Run time:** 40 min/13 shaves

**Battery Type:** NiMH

**Charging:** 1 hour full charge, Quick charge 5  
min for 1 shave

**Automatic voltage:** 100–240 V

**Stand-by power:** 0.1 W

**Max power consumption:** 9 W

## Design

**Colour:** Charcoal Grey – Aquatic Blue

**Handle:** Ergonomic grip and handling

## Service

**Replacement head:** Replace every 2 yrs with  
SH50

**2 year guarantee**

## Shaving Performance

**Contour following:** 5 direction Flex Heads

**SkinComfort:** Aquatec Wet and Dry,  
SkinProtection System

**Shaving system:** ComfortCut Blade System

## Ease of use

**Display:** 1 level battery indicator, Battery low  
indicator, Travel lock indicator

**Cleaning:** Fully washable

**Operation:** Unplug before use

