

PHILIPS

Wet & Dry epilator

Satinelle Advanced

For legs and body

Ceramic discs grip fine hairs

S-shaped handle design

+ 3 accessories



BRE620/00



Our fastest epilation even on the finest of hairs 2 hair removal routines

Our fastest ever epilator has unique ceramic discs that rotate at a greater speed than ever before and firmly grip fine and short hairs. Enjoy weeks of satin smooth skin and treat your body areas with tailored hair removal methods.

Easy and effortless usage

- First epilator with S-shaped handle
- Cordless wet and dry for use in bath or shower
- Opti-light helps you target and remove even trickiest hairs

Exceptional results

- Extra wide epilator head
- Epilation head of unique ceramic material for better grip

Personalized body care routines

- Shaving head and trimming comb for a close shave
- Includes massage cap


Highlights

Our fastest epilation ever



Our epilator head is unique in being made from a textured ceramic surface that gently extract even the finest hairs and those 4x shorter than wax. Now with faster disc rotation than ever before (2200RPM) for our fastest hair removal.

Extra wide epilator head

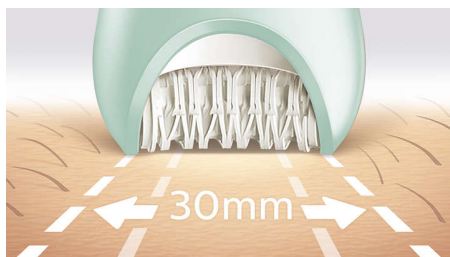

Extra wide epilator head covers more skin with every stroke for faster hair removal.

Ergonomic S-shaped handle



The ergonomic S-shaped handle is easy to steer for maximum control and better reach with natural and precise movements, all over your body.

Cordless wet and dry usage



Designed with an anti-slip grip, ideal for use with water. Enables a more comfortable, gentle experience in your shower or bath. You can use it cordless for best convenience.

Opti-Light

Opti-light helps you target and remove even trickiest hairs

Shaving head and trimming comb



The shaving head provides a close shave and more gentleness in different body areas. It comes with a trimming comb to style your bikini area.

Massage cap



Massage cap eases the epilation sensation.

Specifications

Technical specifications

Number of discs: 17

Voltage: 15V / 5.4W

Tweezing action speed 2: 70400 per minute

Number of tweezers: 32

Tweezing action speed 1: 64000 per minute

Power

Battery Type: Lithium-ion

Charging: Rechargeable, 1.5 hour charging time

Quick charge

Usage time: up to 40 minutes

Ease of use

Cordless

Handle: S-shape handle

Wet and dry use

Opti-light

Accessories

Cleaning brush

Pouch: Basic pouch

Shaving head

Trimming comb

Massage cap

Features

Speed settings: 2 settings

Performance

Epilation discs: Ceramic discs

Epilator head: Extra wide

Epilation system: Patented epilation system

