

PHILIPS

Wet and dry electric shaver

Shaver series 5000

MultiPrecision Blade System

45 min cordless use/1h charge

SmartClick precision trimmer



S5420/21

Wet or Dry, Protective Shave

Protects 10X better versus a regular blade

The Aquatouch shaver protects your skin while you enjoy a refreshing shave. Our MultiPrecision Blade System with rounded profile heads glides smoothly across, and it's designed to protect your skin.

Easy to use

- 45 minutes of cordless shaving
- 1-hour charging time
- 1-level battery and travel lock Indicators
- 2-year guarantee, worldwide voltage and replaceable blades

A comfortable and close end result

- A rounded head profile glides smoothly protecting your skin
- Get a comfortable dry or refreshing wet shave with Aquatec
- Blades raise then cut long and short hairs for a fast shave
- Heads flex in 5 directions for a fast close shave
- Lifts hairs to cut comfortably close

Get the most out of your shaver

- Click-on trimmer for perfect mustache and sideburn trimming

Highlights

Skin Protection System



Shave close without nicks and cuts. The MultiPrecision Blade System with rounded head profile glides smoothly across, while protecting your skin.

Aquatec Wet & Dry

Choose how you prefer to shave. With the Aquatec Wet & Dry seal, you can opt for a quick yet comfortable dry shave. Or you can shave wet – with gel or foam – even under the shower.

MultiPrecision Blade System



Get a shave that's fast and close. Our MultiPrecision Blade System raises and cuts all hairs and remaining stubble – all in a few strokes.

5-direction Flex Heads




5-direction Flex Heads with 5 independent movements ensure close skin contact for a fast and close shave even on neck and jaw line.

SmartClick precision trimmer

Click on our skin-friendly precision trimmer to finish your look. It's ideal for maintaining your mustache and trimming your sideburns.

45 minutes of cordless shaving

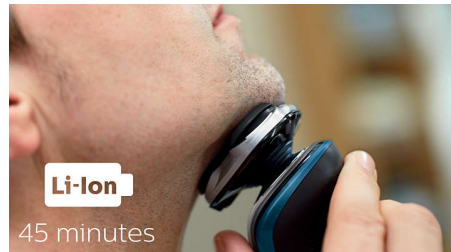

You'll have 45+ minutes of running time – that's about 15 shaves – on a one-hour charge. This shaver only operates in cordless mode.

1-hour charging time



Shave longer with every charge, thanks to our powerful energy-efficient, long-lasting lithium-ion battery. Do a quick charge for 5 minutes and you'll have enough power for one shave.

LED display



The intuitive display shows relevant information, enabling you to get the best performance out of your shaver: - 1-level Battery Indicator - Cleaning Indicator - Battery Low Indicator - Replacement Head Indicator - Travel Lock Indicator

Super Lift & Cut Action



Shave closer with the dual-blade Super Lift & Cut Action. The first blade raises each hair while the second blade comfortably cuts below skin level, for really smooth results.

Specifications

Power

Automatic voltage: 100-240 V

Battery Type: Lithium-ion

Charging: 1 hour full charge, Quick charge 5 min for 1 shave, Rechargeable

Run time: 45 min / 15 shaves

Stand-by power: 0.1 W

Max power consumption: 9 W

Ease of use

Cleaning: Fully washable

Display: 1 level battery indicator, Battery low indicator, Charging indicator, Cleaning indicator, Replace shaving heads indicator, Travel lock indicator

Operation: Unplug before use

Design

Color: Neptune Blue - Charcoal Grey

Handle: Ergonomic grip & handling

Shaving Performance

Shaving system: MultiPrecision Blade System, Super Lift & Cut Action

Contour following: 5-direction Flex Heads

SkinComfort: SkinProtection System, AquaTec Wet & Dry

Accessories

SmartClick: Precision trimmer

Maintenance: Protective cap

Service

Replacement head: Replace every 2 yrs with SH50

2-year guarantee

Consumer Trade Item

Height: 23.2

Width: 15.9

Length: 7

Net Weight: .311

Gross Weight: .427

GTIN: 08710103741510

Country of origin: NL

Harmonized system code: 851010

Outer Carton

Height: 24.6

Width: 14.7

Length: 32.5

Gross Weight: 1.908

GTIN: 18710103741517

