

Philips Headgroom
do-it-yourself hair clipper

Stainless steel blades

13 length settings
60mins cordless use/1h charge
Precision buzz comb

QC5570/15

Cut your own hair - even in hard-to-reach areas

with 180° rotating head

The unique 180° rotating head of this Philips hair clipper makes it easy to reach even the most difficult spots. So you can give yourself a perfectly even and precise haircut every time.

Easy to use

- Rubber grip for maximum control
- Rounded tips and combs prevent skin irritation
- Corded and cordless use
- Fully washable for easy cleaning
- Battery light shows the battery status
- Self-sharpening blades

Performance

- 13 easy lock-in length settings from 0.5 to 15mm.
- 2-year guarantee, worldwide voltage
- Up to 60 minutes of cordless power after an 1-hour charge.
- Precision comb for a short buzz style.

Easy-reach design

- 180° rotating head for easy reach.

PHILIPS

do-it-yourself hair clipper
Stainless steel blades 13 length settings, 60mins cordless use/1h charge, Precision buzz comb

QC5570/15

Highlights

180° rotating head



The rotating head gives you total control over the clipper's angle, so you can turn the head to reach even the most difficult areas with ease.

Skin-friendly



The rounded edges on the blades and combs are designed to avoid scratching the skin for a more comfortable trim.

after a 1-hour charge. A quick 10-minute charge gives you 10 minutes of clipping time, so it's always ready when you are.

Battery light




Battery light glows white when full and blinks orange when 10 minutes remain.

13 lock-in length settings



Turn the integrated zoom wheel beneath the clipper's head to select and lock in the length setting you want. Two combs provide length settings from 1mm to 15mm, with precisely 2mm between each length. Use the special precision comb for buzz cut...or use the clipper without a comb for a close 0.5mm trim.

Corded & powerful cordless use

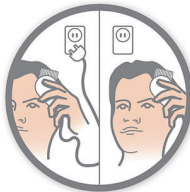

Use it cordless or plugged in.

100% Washable



Conveniently washes under the tap for a thorough clean.

Precision comb



Extra precision for the extra short hairstyles with a dedicated comb (lengths setting from 0.5mm to 3mm, with 0.5 mm steps).

Self-sharpening blades



The self-sharpening, stainless steel blades stay sharp longer and ensure top cutting performance.

Rubber grip



The soft-touch rubber grip ensures optimal hold, for better control when operating.

NiMh power



Use with or without cord for flexibility. The powerful NiMh battery lasts up to 60 minutes

do-it-yourself hair clipper
Stainless steel blades 13 length settings, 60mins cordless use/1h charge, Precision buzz comb

QC5570/15

Specifications

Power system

- Battery type: NiMH
- Running time: up to 60 minutes
- Charging time: 1 hour
- Usage: Corded/cordless

Accessories

- Cleaning brush
- Oil in pack

Design

- Shape: Ergonomic design

Service

- 2-year worldwide guarantee

Cutting system

- Cutting element: Stainless steel blades
- Number of length settings: 13
- Range of length settings: 0.5-15mm
- Precision (size of steps): By 2mm mm
- Big comb: 3-15mm
- Cutter width: 41 mm
- Precision comb: 1-3 mm

Ease of use

- Zoom wheel
- Display: Charging indicator
- Adjustable guide combs
- Cleans under the tap



Issue date 2023-12-18

Version: 8.0.1

UPC: 0 75020 05660 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com