



Philips SpeedCare
Steam generator iron

Max 4.8 bar pump pressure

170 g steam boost
Carry lock
1.2-l fixed water tank

Faster and easier ironing**

with twice as much steam** as a steam iron

The Philips SpeedCare steam generator delivers more steam than a steam iron, helping you to speed up your ironing. Enjoy more quality time with your family thanks to the reduced ironing time with the Philips SpeedCare steam generator iron.

Fast and powerful ironing

- Max 4.8 bar pump pressure
- 1.2-l water tank and refill at any time during ironing
- Triple precision tip for optimal control and visibility
- Smart Calc cleaning system with a sound and light cleaning reminder
- Ready to use in 2 minutes with unlimited refill
- Compact size and light weight for easy storage
- Automatically turned off for safety and energy saving
- Continuous steam up to 110 g/min
- Lock your iron securely to the base station



GC6630

PHILIPS

Highlights

Steam ready in 2 minutes




Steam is ready to use in 2 minutes and can be refilled at any time during ironing.

1.2-l water tank



The SpeedCare steam generator has a 1.2-l water tank capacity to allow you to iron for over an hour. It helps to reduce the number of refills required for large laundry loads. The technology will also allow you refill the water tank during ironing without the appliance cooling down for 2 hours while it is waiting to be refilled.

Triple precision tip

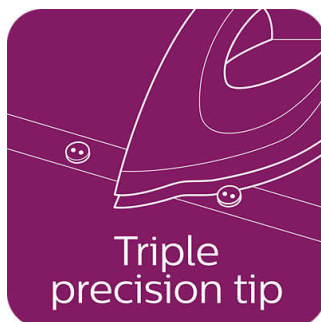

The tip of this Philips iron is precise in 3 ways: it has a pointed tip, button groove and a sleek

nose design. The triple precision tip enables you to reach even the most tricky areas, e.g. around the buttons or between the pleats.

Compact size and light weight



Thanks to the revolutionary ProVelocity technology, we made your steam generator iron more compact than ever before. The compact steam generator fits easily on your ironing board making your ironing more convenient. In addition, your steam generator takes much less storage space.

Smart Calc cleaning system



The Smart Calc cleaning system is an integrated descaling and cleaning function that protects your steam generator iron. After around 10 hours of ironing, your steam generator iron will remind you to perform the Calc cleaning process with a sound and light notification. The iron conveniently rests on the Calc container as it collects the dirty water, so you don't have to strain to hold the iron during the process. After all the water has been collected in the container, your steam generator iron is ready to use again.

Safety carry lock




Your steam generator iron comes with a safety carry lock. You can lock your iron safely on the base, making it safer and reducing the risk of people touching the hot soleplate. You can also carry the steam generator easily.

Continuous steam



The more steam, the faster the ironing. The unique technology in a Philips steam generator iron generates powerful steam making ironing easier, better and faster.

Automatic shut-off

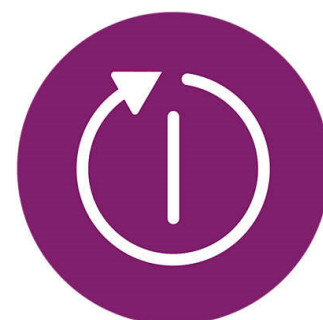

The safety auto off function automatically switches off the appliance if it has not been used for a few minutes, also saving energy.

Specifications

Calc management

- Calc clean solution: Smart Calc Clean
- Suitable for tap water
- Calc clean reminder
- Filtered water recommended

Accessories

- Calc Clean container

Technical specifications

- Voltage: 220 - 240 V

Weight and dimensions

- Weight of iron: 1.1 kg
- Packaging dimensions (W x H x D): 26.4 x 30.3 x 40.4 cm
- Product dimensions (W x H x D): 19.8 x 21.7 x 34.6 cm
- Weight of iron + base: 2.6 kg

Easy to use

- Water tank capacity: 1200 ml
- Refill any time

- Filling and emptying water: Extra-large filling hole, Large filling hole
- Heat-up time: 2 min
- Safety auto off
- Storage solution: Carry lock
- Cord freedom (swivel): 180 degree cord freedom
- Cord storage: Cord clip
- Ultra-light and comfortable
- Power cord length: 1.8 m
- Hose length: 1.6 m
- Hose storage: Hose storage compartment

Service

- 2-year worldwide guarantee

Fast and powerful crease removal

- Soleplate: SteamGlide Ceramic
- Continuous steam output: 110 g/min
- Power: 2400 W
- Pressure: Max 4.8 bar pump pressure
- Steam boost: 170 g
- Vertical steaming
- Steam output control



Issue date 2023-08-22

Version: 1.0.2

EAN: 87 10103 74892 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Compared to Philips steam iron EasySpeed