

PHILIPS

Wet and dry electric shaver

Shaver series 5000

MultiPrecision Blade System

5-direction Flex Heads

SmartClick precision trimmer



S5380

Wet or Dry, Protective shave

Protects 10X better versus a regular blade*

The Shaver Series 5000 protects your skin while you enjoy a refreshing shave. Our MultiPrecision Blade System with rounded profile heads glides smoothly across, and it's designed to protect your skin.

Easy to use

- 45 minutes of cordless shaving
- 1-hour charging time
- 3-level battery and travel lock Indicators

A comfortable shave

- Shave through dense parts of beard with 10% more power

A comfortable and close end result

- Get a comfortable dry or refreshing wet shave with Aquatec
- Heads flex in 5 directions for a fast close shave
- Blades raise then cut long and short hairs for a fast shave
- Lifts hairs to cut comfortably close

Get the most out of your shaver

- Click-on trimmer for perfect mustache and sideburn trimming

Highlights

5-direction Flex Heads



5-direction Flex Heads with 5 independent movements ensure close skin contact for a fast and close shave even on neck and jaw line.

Turbo mode



Shave even faster through dense parts of your beard with the 10% extra power boost you get by activating Turbo mode.

MultiPrecision Blade System




Get a shave that's fast and close. Our MultiPrecision Blade System raises and cuts all hairs and remaining stubble – all in a few strokes.

Aquatec Wet & Dry



Choose how you prefer to shave. With the Aquatec Wet & Dry seal, you can opt for a quick yet comfortable dry shave. Or you can shave wet – with gel or foam – even under the shower.

45 minutes of cordless shaving

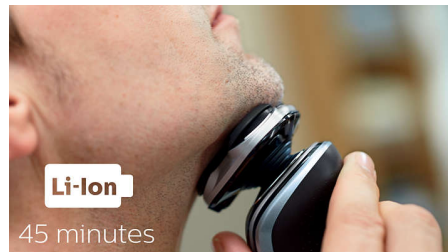

You'll have 45+ minutes of running time – that's about 15 shaves – on a one-hour charge. This shaver only operates in cordless mode.

1-hour charging time



Shave longer with every charge, thanks to our powerful energy-efficient, long-lasting lithium-ion battery. Do a quick charge for 5 minutes and you'll have enough power for one shave.

SmartClick precision trimmer

Click on our skin-friendly precision trimmer to finish your look. It's ideal for maintaining your mustache and trimming your sideburns.

LED display



The intuitive display shows relevant information, enabling you to get the best performance out of your shaver: - 3-level Battery Indicator - Cleaning Indicator - Battery Low Indicator - Replacement Head Indicator - Travel Lock Indicator

Super Lift & Cut Action



Shave closer with the dual-blade Super Lift & Cut Action. The first blade raises each hair while the second blade comfortably cuts below skin level, for really smooth results.

Specifications

Accessories

SmartClick: Precision trimmer

Maintenance: Protective cap

Power

Battery Type: Lithium-ion

Charging: 1 hour full charge, Quick charge 5 min for 1 shave

Run time: 45 min / 15 shaves

Automatic voltage: 100-240 V

Stand-by power: 0.1 W

Max power consumption: 9 W

Design

Handle: Ergonomic grip & handling

Color: Blue Water - Super Nova Silver

Service

2-year guarantee

Replacement head: Replace every 2 yrs with SH50

Shaving Performance

SkinComfort: AquaTec Wet & Dry

Contour following: 5-direction Flex Heads

Shaving system: MultiPrecision Blade System, Super Lift & Cut Action

Turbo mode: Shave with 10% extra power

Ease of use

Display: 3 level battery indicator, Battery low indicator, Charging indicator, Cleaning indicator, Replace shaving heads indicator, Travel lock indicator

Cleaning: Fully washable

Operation: Unplug before use

