

PHILIPS

Electric shaver

arcitec

With mirror display

RQ1060/20

The best shaver from the world's no. 1

Perfectly close, even on the neck

For men who only want the very best, The Philips arcitec electric shaver RQ1060 combines Flex & Pivot Action with the Triple-track shaving heads for a perfectly close shave, even on the neck.

Comfortably close

- Super Lift & Cut technology

Shaves even the shortest stubble

- Precision Cutting System

Simply rinses clean

- Washable shaver

A fast and close shave

- Triple-Track shaving heads with 50% more shaving surface

Perfectly close, even on the neck

- Flex & Pivot Action follows every curve

Highlights

Flex & Pivot Action




Three independently flexing heads in a shaving unit that swivels with a full range of motion. This unique combination ensures optimum skin contact in curved areas to catch even the most problematic neck hair.

Triple-Track shaving heads



The three shaving tracks of the Triple-Track shaving heads offer 50% more shaving surface than standard, single track rotary shaving heads.

Super Lift & Cut technology

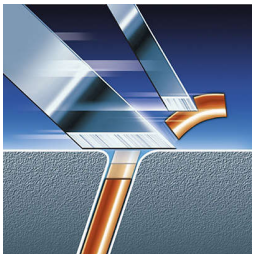

The dual blade system of this electric shaver lifts hairs to cut comfortably below skin level.

Precision Cutting System



The electric shaver has ultra thin heads with slots to shave the long hairs and holes to shave even the shortest stubble.

Precision tube trimmer



Patented tube trimmer technology for great precision and maneuverability. Perfect for contouring and trimming moustache and sideburns.

Washable shaver



The waterproof shaver can be easily rinsed under the tap.

Specifications

Shaving Performance

Shaving system: Triple-Track shaving heads, Precision Cutting System, Super Lift & Cut technology

Contour following: Flex & Pivot Action, Pivoting shaving unit

Styling: Skin friendly precision trimmer

Design

Finishing: Mirror coated display

Ease of use

Charging: Rechargeable, Quick charge

Display: Battery level indicator, Charge indicator, Replace shaving heads indicator, Travel lock

Cleaning: Washable, Cleaning indicator

Charging: 1 hour

Shaving time: 21 days

Accessories

Maintenance: Cleaning brush, Protective cap

Stand: Power Pod

