

PHILIPS

NORELCO

Wet & dry electric
shaver, Series 8000

Shaver 8900

UltraTrack heads

GyroFlex 3D contouring system

60 min shaving, 1 hr charge

JetClean system

1280X/42



Series 8000 – Ultimate shaving experience with GyroFlex 3D and JetClean systems

The Philips Norelco Shaver 8900 (formerly called SensoTouch 3D) provides the ultimate shaving experience. The Gyroflex 3D system follows every contour of your face and the JetClean System washes, lubricates, dries and charges your shaver.

Designed for comfort

- Contour-following shaver minimizes pressure and irritation
- Smooth surface glides over your skin

Protective seal for wet or dry shaving

- Comfortable shaving, wet or dry, thanks to the AquaTec seal

Cordless, travel-friendly design

- One-hour charge provides up to 20 days of shaving time

Easy cleaning with Jet Clean

- Jet Clean system cleans, lubricates, and charges the razor

Innovative technology for a closer shave

- Shaver lifts hair to cut below skin level
- Shaving heads catch and trim every hair


Highlights

GyroFlex 3D



Philips Norelco's best shave yet, Series 8000 gives you the ultimate shaving experience. Its GyroFlex 3D system has three dynamic parts that move independently, flexing outward, pivoting around, and tilting inward to follow the contours of your face.

UltraTrack shaving heads

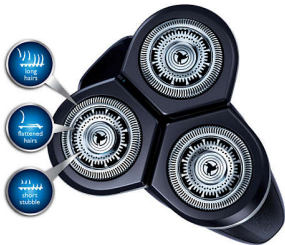

The UltraTrack shaving heads catch every hair in just a few strokes with three specialized shaving tracks: slots for long hairs, channels for longer hairs, and holes for the shortest stubble.

Super Lift and Cut action



The patented Super Lift & Cut dual blade system lifts hairs to cut comfortably below skin level for a close, even shave.

Aquatec - Wet or Dry shaving



With the SensoTouch 3D, you can shave any way you want. The AquaTec seal gives you the option of either a comfortable dry shave or a refreshing wet shave with shaving cream or gel.

SkinGlide shaving surface



With a low-friction SkinGlide shaving surface, the razor slides smoothly along your skin for a close shave without irritation.

Jet Clean system



The SensoTouch 3D comes complete with a Jet Clean system that cleans, lubricates, and charges the razor, so it's ready to go when you are. Just choose the setting that meets your needs--Automatic for normal usage, Eco for 40-percent-less energy usage, and Intensive for thorough cleansing.

Rechargeable



The cord-free SensoTouch 3D charges in one hour and provides up to 60 minutes (or a maximum of 20 days) of shaving time. A display lets you know how much power remains in the lithium-ion battery and when you need to replace the blades.

Specifications

Accessories

Pouch: Luxurious pouch

Maintenance: Cleaning brush, Protective cap

Stand: Charging stand

Jet Clean+: 3 cleaning settings, Automatic, Intensive, Low-energy

Power

Battery Type: Lithium-ion

Stand-by power: 0.15 W

Run time: 60 minute(s)

Max power consumption: 5.4 W

Automatic voltage: 100-240 V

Design

Handle: Slim handle, Easy grip, Anti-slip grip

Finishing: Chromed frame, LED Display

Color: Black

Service

2-year guarantee

Replacement head: Replace every yr with RQ12

Shaving Performance

Shaving system: UltraTrack shaving heads, Speed XL shaving heads, DualPrecision System, Patented Super Lift & Cut

Contour following: GyroFlex 3D contour following

SkinComfort: SkinGlide

Styling: Skin friendly precision trimmer

Ease of use

Cleaning: Washable

Charging: 1 hour, Rechargeable, Cordless, Quick charge

Wet & Dry: Wet and dry use, Jet Clean

Display: Full numeric battery indicator, Battery low indicator, Charge indicator, Travel lock, Cleaning indicator, Replace shaving heads indicator

Shaving time: Up to 20 days

Jet Clean+: 3 cleaning settings, Automatic, Cleans, lubricates and charge, Intensive, Low-energy

