

Philips Shaver series 5000
Wet and dry electric
shaver

MultiPrecision Blade System
45 min cordless use/1h charge
SmartClick precision trimmer



S5400/08

Wet or Dry, Protective Shave

Protects 10X better versus a regular blade

The Aquatouch shaver protects your skin while you enjoy a refreshing shave. Our MultiPrecision Blade System with rounded profile heads glides smoothly across, and it's designed to protect your skin.

Easy to use

- 45 minutes of cordless shaving
- 1-hour charging time
- 1-level battery and travel lock Indicators
- 2-year guarantee, worldwide voltage and replaceable blades

A comfortable and close end result

- A rounded head profile glides smoothly protecting your skin
- Get a comfortable dry or refreshing wet shave with Aquatec
- Blades raise then cut long and short hairs for a fast shave
- Heads flex in 5 directions for a fast close shave
- Lifts hairs to cut comfortably close

Get the most out of your shaver

- Click-on trimmer for perfect mustache and sideburn trimming

PHILIPS

Highlights

Skin Protection System



Shave close without nicks and cuts. The MultiPrecision Blade System with rounded head profile glides smoothly across, while protecting your skin.

Aquatec Wet & Dry



Choose how you prefer to shave. With the Aquatec Wet & Dry seal, you can opt for a quick yet comfortable dry shave. Or you can shave wet – with gel or foam – even under the shower.

MultiPrecision Blade System



Get a shave that's fast and close. Our MultiPrecision Blade System raises and cuts all hairs and remaining stubble – all in a few strokes.

5-direction Flex Heads




5-direction Flex Heads with 5 independent movements ensure close skin contact for a fast and close shave even on neck and jaw line.

SmartClick precision trimmer

Click on our skin-friendly precision trimmer to finish your look. It's ideal for maintaining your mustache and trimming your sideburns.

45 minutes of cordless shaving

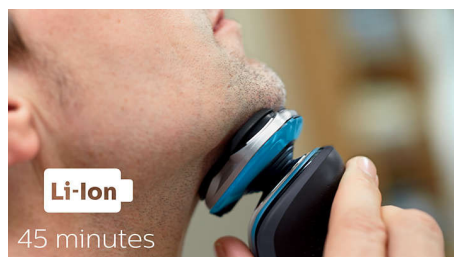

You'll have 45+ minutes of running time – that's about 15 shaves – on a one-hour charge. This shaver only operates in cordless mode.

1-hour charging time



Shave longer with every charge, thanks to our powerful energy-efficient, long-lasting lithium-ion battery. Do a quick charge for 5 minutes and you'll have enough power for one shave.

LED display



The intuitive display shows relevant information, enabling you to get the best performance out of your shaver: - 1-level Battery Indicator - Cleaning Indicator - Battery Low Indicator - Replacement Head Indicator - Travel Lock Indicator

Super Lift & Cut Action



Shave closer with the dual-blade Super Lift & Cut Action. The first blade raises each hair while the second blade comfortably cuts below skin level, for really smooth results.

Specifications

Shaving Performance

- SkinComfort: AquaTec Wet & Dry, SkinProtection System
- Contour following: 5-direction Flex Heads
- Shaving system: MultiPrecision Blade System, Super Lift & Cut Action

Design

- Color: Charcoal Grey - Aquatic Blue - Super Nova Silver
- Handle: Ergonomic grip & handling

Ease of use

- Display: 1 level battery indicator, Battery low indicator, Charging indicator, Cleaning indicator, Replace shaving heads indicator, Travel lock indicator
- Cleaning: Fully washable
- Operation: Unplug before use

Accessories

- SmartClick: Precision trimmer
- Maintenance: Protective cap

Power

- Battery Type: Lithium-ion
- Charging: 1 hour full charge, Quick charge 5 min for 1 shave
- Run time: 45 min / 15 shaves
- Automatic voltage: 100-240 V
- Stand-by power: 0.1 W
- Max power consumption: 9 W

Service

- 2-year guarantee
- Replacement head: Replace every 2 yrs with SH50



Issue date 2022-07-24

Version: 1.1.1

EAN: 00 07502 00568 18

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Protects 10X better versus a regular blade - test done in Germany
2015, after 21 days acclimation