

PHILIPS

13-in-1, Face, Hair
and Body

Multigroom series
7000

13 tools

DualCut technology

Up to 120 min run time

Showerproof



MG7715/13



Ultimate styling & precision

13-in-1 premium trimmer for ultimate versatility

Perfect your personal style with our most precise and versatile trimmer. 13 premium tools empower you to craft your unique style, from head to toe. Enjoy maximum precision with DualCut blades and added control with a no-slip rubber grip.

Easy to use

- Store it and stay organized
- Warranty for purchase protection
- 120 minutes of runtime
- Showerproof for convenient use in the shower and cleaning
- Easy to grip

Cutting performance

- Maximum precision with 2x more blades

Versatility

- Get the details right
- Keeps nose and ear hair at bay
- Cut hair to your length
- 13 pieces to trim your face and head
- Self-sharpening blades for a smooth result
- Say goodbye to unwanted body hair

Highlights

DualCut technology



This all-in-one hair trimmer features advanced DualCut Technology for maximum precision. It comes with double blades, and is designed to stay as sharp as day 1.

13 tools for face, hair & body



The Philips Multigroom all-in-one hair trimmer comes with 13 attachments to provide a full-body grooming solution.

Full-metal trimmer



Create clean, straight lines and evenly trim through the thickest hair thanks to the body and beard trimmer's precise steel blades. These non-corrosive blades won't rust, and they self-sharpen to last longer.

Bodyshaver with skin protector




Shave comfortably below the neck, with our unique skin protector system that guards even your most sensitive body areas and lets you shave to a closeness of 0.5mm

Full-metal detailer




The narrow design of the steel precision groomer makes it easy to precisely edge and finish small details.

Nose and ear trimmer

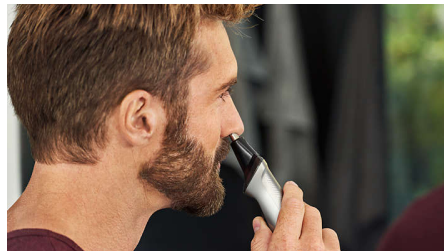

Avoid nicks and cuts, as the all-in-one trimmer quickly removes unwanted nose and ear hair.

8 Impact-resistant combs

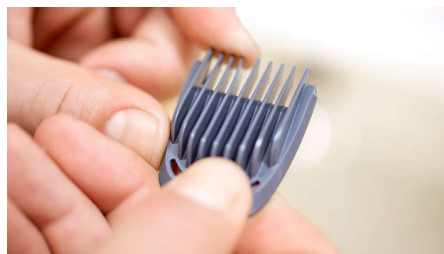

Quickly touch up your face and hair with the eight reinforced cutting guards. 2 stubble combs for 1mm and 2mm trimming, an

adjustable beard comb, 3 hair combs at 9mm, 12mm and 16mm, and 2 body combs for 3mm and 5mm grooming.

Up to 120 minutes run time




This Philips trimmer gives you up to 120 minutes of cordless use from a single 1-hour charge. A quick 5-minute charge provides enough power for one full trim.

Soft rubber grip



Your trimmer is easy to hold and manoeuvre, with a rubber ergonomic grip for more controlled trimming.

Showerproof

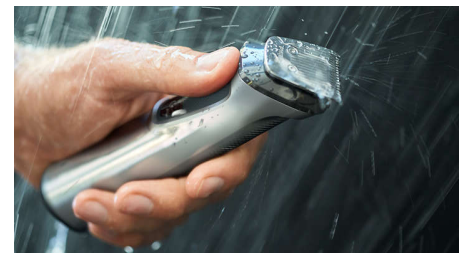

This trimmer is designed to be water-resistant, so that you can use it comfortably in the shower and easily clean it under the tap.

Specifications

Power

Run time: 120 minutes

Battery type: Lithium-ion

Automatic voltage: 100-240 V

Charging: 1 hour full charge, 5 min quick charge

Cutting system

DualCut technology: Cut in two directions

Self-sharpening blades

Design

Handle: No-slip rubber grip

Ease of use

Maintenance free: No oil needed

Display: Charging indicator, Battery low indicator

Wet & Dry: Showerproof and easy cleaning

Accessories

Maintenance: Cleaning brush

Create the look you want

Number of tools: 13 tools

Styling tools: Metal trimmer, Detail metal trimmer, Nose & ear trimmer, Bodyshaver, Body

skin protector attachment, 3-7mm beard adjustable comb, 2 stubble combs, 3 hair combs, 2 body combs

Bodygroom/Hairclipping/Facial: Long beard, Short beard, Stubble look, Sharp lines, Detailed styling, Goatee

Service

2-year warranty

