



Philips Hairclipper series  
7000  
Hair clipper

**Stainless steel blades**  
60 length settings  
120mins cordless use/1h charge



**HC7460/13**

## 1 click, total precision

with Motorized Combs

HAIRCLIPPER Series 7000 gives you total precision and control of your haircut with just one click. With Motorized Combs and a high performance cutting element, it's the only clipper that gives consistently the expected results.

### Easy to use

- Remembers the last used length setting
- Up to 120 minutes of cordless use

### Performance

- Self-sharpening steel blades for long-lasting sharpness
- Motorized Combs for easy length selection
- Effortlessly adapts to thick hair
- Double-sharpened cutting element cuts two times faster\*
- Warranty for purchase protection

### Ultimate precision and control

- Control buttons
- Easy to select and lock-in 60 length settings: 0,5 to 42mm
- Adjustable hair combs for the best clipping results

**PHILIPS**

## Hair clipper

Stainless steel blades 60 length settings, 120mins cordless use/1h charge

# Highlights

### Control buttons

The intuitive user interface gives you precise feedback on the selected length. Use the buttons to easily select and lock-in more than 60 length settings. Quickly browse through lengths or slowly go through each small step of 0.2 mm.

### 60 lock-in length settings



Use the Control Buttons to precisely select and lock-in the length you want, with more than 60 length settings. Use the comb to trim with precisely 0,2mm increments between 1 and 7mm, and 1mm between 7 and 42mm. Or you can use it without the comb for a close 0.5mm trim.


### 3 adjustable hair combs



The clipper comes with 3 adjustable hair combs: from 1 to 7mm, 7 to 24mm and 24 to 42mm. Just attach one of the combs for more than 60 lock-in length settings, with precisely 0,2mm increments between 1 and 7mm, and 1mm between 7 and 42mm. Or you can use

the clipper without the comb for a close 0.5mm trim.

### Stainless steel blades

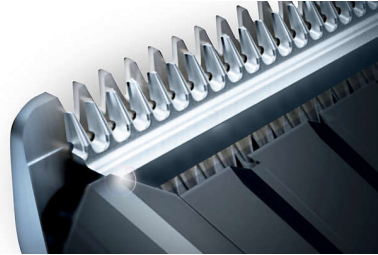

Self-sharpening stainless steel blades for long-lasting sharpness.

### Motorized Combs



The motor powered length setting system easily selects and locks in the preferred length. The motor powers the comb and allows selecting between lengths with a precision of up to 0.2mm. This innovative technology gives you the security of clipping all the time at the desired length and achieving consistent results time after time.


### Auto Turbo



The Auto Turbo feature automatically adapts to thicker hair, giving a little boost of extra power for an effortless cutting motion.

HC7460/13

### DualCut Technology

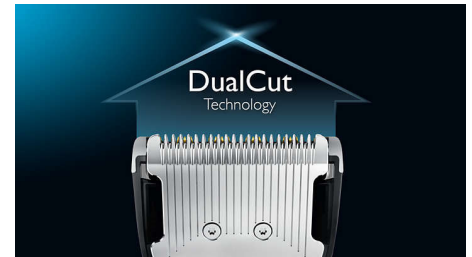

Power through any hair type with our advanced DualCut Technology, which combines a double-sharpened cutting element with low-friction engineering. The innovative cutting element is designed to cut hair twice as fast as regular Philips clippers, with the added confidence of a robust steel guard for ultimate durability.

### Remembers last length setting



The comb goes back to the last used cutting length setting when the clipper is turned on.

### Powerful cordless use



Don't get tangled up in your cordless hair clippers – a 1 hour charge provides up to 120 minutes of powerful clipping time. Or keep it plugged in for uninterrupted trimming.

## Hair clipper

Stainless steel blades 60 length settings, 120mins cordless use/1h charge

HC7460/13

# Specifications

### Cutting system

- Cutter width: 41mm
- Cutting element: Stainless steel blades
- Number of length settings: 60
- Range of length settings: From 0.5 to 42 mm
- Precision (size of steps): 0.2mm/1mm
- Length selection: Control Buttons, Motorized Combs

### Accessories

- Attachments: 3 hair combs

### Ease of use

- Maintenance free: No oil needed

- Cleaning: Removable cutter
- Memory function

### Power system

- Motor: Auto Turbo
- Battery type: Li-ion
- Operation: Corded and cordless
- Running time: 120 minutes
- Charging time: 1 hour

### Service

- 2-year worldwide guarantee



Issue date 2022-06-25

Version: 1.0.1

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Versus its Philips predecessor