

# PHILIPS

Wet & Dry epilator

Satinelle Advanced

For legs and body

Ceramic discs grip fine hairs

S-shaped handle design

+ 3 accessories



BRE620/00



## Our fastest epilation even on the finest of hairs 2 hair removal routines

Our fastest ever epilator has unique ceramic discs that rotate at a greater speed than ever before and firmly grip fine and short hairs. Enjoy weeks of satin smooth skin and treat your body areas with tailored hair removal methods.

### Easy and effortless usage

- First epilator with S-shaped handle
- Cordless wet and dry for use in bath or shower
- Opti-light helps you target and remove even trickiest hairs

### Exceptional results

- Extra wide epilator head
- Epilation head of unique ceramic material for better grip

### Personalized body care routines

- Shaving head and trimming comb for a close shave
- Includes massage cap


# Highlights

## Our fastest epilation ever



Our epilator head is unique in being made from a textured ceramic surface that gently extract even the finest hairs and those 4x shorter than wax. Now with faster disc rotation than ever before (2200RPM) for our fastest hair removal.

## Extra wide epilator head

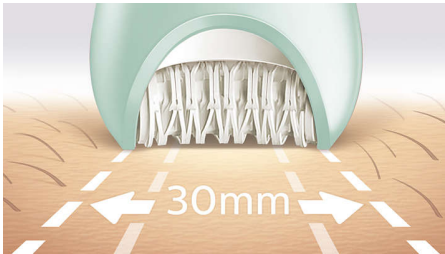

Extra wide epilator head covers more skin with every stroke for faster hair removal.

## Ergonomic S-shaped handle



The ergonomic S-shaped handle is easy to steer for maximum control and better reach with natural and precise movements, all over your body.

## Cordless wet and dry usage



Designed with an anti-slip grip, ideal for use with water. Enables a more comfortable, gentle experience in your shower or bath. You can use it cordless for best convenience.

## Opti-Light

Opti-light helps you target and remove even trickiest hairs

## Shaving head and trimming comb



The shaving head provides a close shave and more gentleness in different body areas. It comes with a trimming comb to style your bikini area.

## Massage cap



Massage cap eases the epilation sensation.

# Specifications

## Accessories

Cleaning brush  
Pouch: Basic pouch  
Shaving head  
Trimming comb  
Massage cap

## Power

**Battery Type:** Lithium-ion  
**Charging:** Rechargeable, 1.5 hour charging time  
**Quick charge**  
**Usage time:** up to 40 minutes

## Technical specifications

**Number of discs:** 17  
**Voltage:** 15V / 5.4W  
**Tweezing action speed 2:** 70400 per minute  
**Tweezing action speed 1:** 64000 per minute  
**Number of tweezers:** 32

## Features

**Speed settings:** 2 settings

## Ease of use

**Handle:** S-shape handle  
**Cordless**  
**Wet and dry use**  
**Opti-light**

## Performance

**Epilation discs:** Ceramic discs  
**Epilation system:** Patented epilation system  
**Epilator head:** Extra wide

