

PHILIPS



Beard trimmer

Beard trimmer 9000
Prestige

SteelPrecision Technology

PowerAdapt Sensor

3 level battery indicator



BT9810/90

Ultimate steel precision for the perfect beard

The best from Philips

Perfect your style with the Prestige Edition beard-trimming set, combining our BT9000 Prestige, for unmatched precision and trimming, and OneBlade, for precise edging and shaving any length of hair.

Versatility

- Edge it up
- Shave it off
- Unique OneBlade technology

Premium experience

- Crafted to stand the test of time
- Store and go

Consistent and efficient cutting performance

- A trimmer with the power to tame beards

The most precise trim*

- Trimmed to your length, every time
- Glides over the skin for a smooth trim
- Sharp metal blades cut precisely without pulling
- Ultimate precision and even results

Beard trimmer 9000 Prestige

Beard trimmer


BT9810/90

Highlights

SteelPrecision Technology


The Philips beard trimmer 9000 Prestige features the brand new SteelPrecision Technology which consists of an integrated metal comb and strong cutter. This system does not bend like a plastic comb, no matter the pressure, to ensure the most even and precise trimming results*.

Anti-friction skin follower

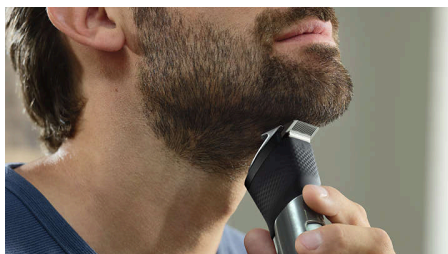

Get the most even result from your trim. This beard trimmer for men always follows the contours of your face, with an anti-friction coating that allows it to effortlessly and comfortably glide over your skin.

Full metal blades

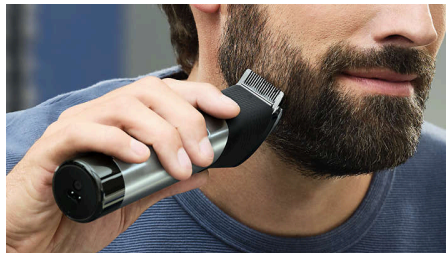

Our full metal blades remain sharp for life. And thanks to the special geometry of the blades, the beard trimmer 9000 Prestige cuts even the thickest hair without pulling.

0.2-mm precision



It's your beard, so you control how long you want it. Simply flick the precision dial of your Philips trimmer to one of 30 length settings from 0.4 to 10 mm.

PowerAdapt Sensor



The steel beard trimmer that reads hair density 125 times per second. The PowerAdapt Sensor automatically adapts the motor to maintain constant power and deliver effortless trimming performance.

Lasting steel body



The Philips 9000 Prestige is built to last. Its high quality stainless steel body is hand-finished with ultimate attention to detail—giving you a lasting premium experience.

Premium travel case



The premium travel case keeps everything together when you're at home or on-the-go.

Beard trimmer 9000 Prestige

Beard trimmer

BT9810/90

Highlights

Edge it up



Get precise lines in seconds with the dual-sided blade that enables you to see every hair you're cutting.

Shave it off



The OneBlade shaver doesn't shave as close as a traditional blade, ensuring your skin stays comfortable. Go against the grain and shave off any length of hair easily.

Unique OneBlade technology



The Philips OneBlade has a revolutionary technology designed for facial styling, and can edge and shave any length of hair. Its dual protection system - a glide coating combined with rounded tips - makes shaving easier and comfortable. Its shaving technology features a fast-moving cutter (200 x per second) so it's efficient - even on longer hairs.

Beard trimmer 9000 Prestige

Beard trimmer

BT9810/90

Specifications

Accessories

Comb: Click-on Long beard comb

Premium storage and travel case

Power

Charging: 1 hour full charge, 4 hours full charge (OneBlade), 5 min quick charge (Multigroom)

Battery type: Lithium-ion

Run time: 120 minutes (Multigroom), 60 minutes (OneBlade)

Automatic voltage: 100-240 V

Service

Replacement head: QP210, QP220, QP610, QP620, Replace every 4 months*

2 year warranty

Usage: Oil in pack

Cutting system

Cutting element: Full metal blades

Number of length settings: 30

Range of length settings: 0.4 mm up to 10 mm

Precision (size of steps): 0.2 mm

OneBlade Unique technology

Cutting technology: SteelPrecision, skin follower

Ease of use

Cleaning: 100% Waterproof

Battery indicator: 3-level indicator

Zoom wheel: Easily adjust length settings

Operation: Corded and Cordless use

