

PHILIPS

Dry electric shaver

Shaver series 5000
PowerTouch

DualPrecision Pivoting heads

50 min cordless use/1h charge

Pop-up trimmer

PT877/16



DualPrecision

Catches more hairs

PowerTouch adds power to your morning. Now with more minutes per charge, fully washable heads and DualPrecision blades - that give you a cleaner shave. With PowerTouch Plus you'll always fly through your morning routine.

A comfortable and close end result

- Perfect for trimming your sideburns and moustache
- DualPrecision heads shave long hairs and short stubble
- Pivot, Flex & Float
- Super Lift & Cut blades raise hairs to cut closer

The fastest way through your morning routine

- Simply rinses clean
- LED Display
- 50+ shaving minutes, 1-hour charge
- Can be used corded and cordless

Highlights

DualPrecision blades



DualPrecision blades comfortably shave both long hairs and short stubble. 1. Slots cut long hairs. 2. Holes cut stubble.

Pivot, Flex & Float



The heads flex to stay in close contact with your skin, and pivot to add an extra dimension of movement - all of which gives you a close, fast and comfortable shave.

50+ shaving minutes



An energy-efficient, powerful and long-lasting lithium-ion battery gives you more shaves per charge. Charge it for an hour, and

you'll have 50+ minutes of shaving time - that's around 17 shaves. Charge it for 3 minutes and you'll have enough power for one shave.

Super Lift & Cut action




The first blade raises each hair while the second blade comfortably cuts below skin level, for really smooth results.

Pop-up trimmer



Complete your look by using the pop-up trimmer. Perfect for maintaining a moustache and trimming sideburns.

Efficient power System

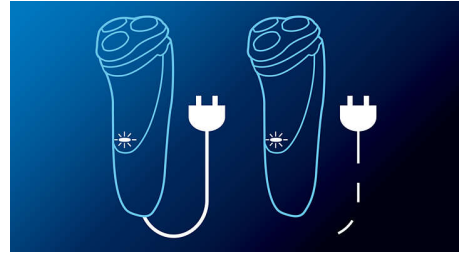

Can be used corded and cordless

Fully washable shaver



Simply pop the heads open, and rinse thoroughly under the tap.

LED Display



Indicates: Battery full, Battery low, Charging, Replace shaving heads, Quick charge



Specifications

Accessories

Maintenance: Cleaning brush, Protective cap

Power

Automatic voltage: 100-240 V

Battery type: Lithium-ion

Stand-by power: < 0.25 W

Max power consumption: 5.4 W

Design

Handle: Ribbed rubber grip, Anti-slip, Ergonomic Easy Grip

Service

Replacement head: HQ8 has been replaced by SH50

Guarantee: 2-year guarantee

Replacement heads: Replace every 2 yrs with HQ8

Shaving Performance

Shaving system: Super Lift&Cut, DualPrecision heads

Contour following: Pivoting and Flexing heads

Styling: Integrated pop up trimmer

Ease of use

Display: 2 LED indicator

Cleaning: Fully washable, QuickRinse hair chamber

Shaving time: 50+ minutes, up to 17 shaves

Operation: Corded and cordless, Rechargeable battery

Charging time: 1 hour, 3 min quick charge for 1 shave

Display indicates: Battery full, Battery low, Charging, Replace shaving heads, Quick charge

