

PHILIPS

do-it-yourself hair
clipper

Headgroom

Stainless steel blades

13 length settings

60 mins' cordless use/1 hr charge

Precision buzz comb

QC5570/13



Cut your own hair - even in hard-to-reach areas with the 180° rotating head

The unique 180° rotating head makes it easy to reach even the most difficult spots. So you can give yourself a perfectly even and precise haircut every time.

Easy to use

- Rubber grip for maximum control
- Rounded tips and combs prevent skin irritation
- Corded and cordless use
- Fully washable for easy cleaning
- Battery light shows the battery status
- Self-sharpening blades

Performance

- 13 easy lock-in length settings from 0.5 to 15mm.
- 2-year guarantee, worldwide voltage
- Up to 60 minutes of cordless power after a 1-hour charge.
- Precision comb for a short buzz style.

Easy-reach design

- 180° rotating head for easy reach.

Headgroom

do-it-yourself hair clipper

QC5570/13

Highlights

180° rotating head



The rotating head gives you total control over the clipper's angle, so you can turn the head to reach even the most difficult areas with ease.

Precision comb



Extra precision for the extra short hairstyles with a dedicated comb (lengths setting from 0.5mm to 3mm, with 0.5 mm steps).

Self-sharpening blades



The self-sharpening, stainless steel blades stay sharp longer and ensure top cutting performance.

13 lock-in length settings




Turn the integrated zoom wheel beneath the clipper's head to select and lock in the length setting you want. Two combs provide length settings from 1mm to 15mm, with precisely 2mm between each length. Use the special precision comb for buzz cut...or use the clipper without a comb for a close 0.5mm trim.

Skin-friendly



The rounded edges on the blades and combs are designed to avoid scratching the skin for a more comfortable trim.

Corded and powerful cordless use

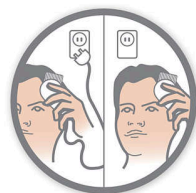

Use it cordless or plugged in.

NiMH power



Use with or without cord for flexibility. The powerful NiMH battery lasts up to 60 minutes after a 1-hour charge. A quick 10- minute charge gives you 10 minutes of clipping time, so it's always ready when you are.

Battery light



Battery light glows white when full and blinks orange when 10 minutes remain.

Headgroom

do-it-yourself hair clipper

QC5570/13

Highlights

100% Washable



Conveniently washes under the tap for a thorough clean.

Rubber grip



The soft-touch rubber grip ensures optimal hold, for better control when operating.

Built to last



All of our grooming products are built to last. They come with a 2-year worldwide guarantee, worldwide voltage compatibility.

Headgroom

do-it-yourself hair clipper

QC5570/13

Specifications

Power system

Battery type: NiMH
Running time: up to 60 minutes
Charging time: 1 hour
Usage: Corded/cordless

Accessories

Cleaning brush
Oil in pack

Design

Shape: Ergonomic design

Consumer Trade Item

Height: 22.4 cm
Width: 14 cm
Length: 7 cm
Net weight: 0.282 kg
Gross weight: 0.394 kg
GTIN: 8710103608684
Country of origin: HU
Harmonized system code: 85102000

Outer Carton

Height: 24 cm
Width: 15 cm
Length: 29 cm
Net weight: 1.128 kg
Gross weight: 1.712 kg
GTIN: 18710103608681

Pallet

Height: 110 cm
Width: 100 cm
Length: 120 cm
Net weight: 108.288 kg
Gross weight: 183.42 kg
GTIN: 68710103608686

Service

2-year worldwide guarantee

Cutting system

Cutting element: Stainless steel blades
Number of length settings: 13
Range of length settings: 0.5–15 mm

Precision (size of steps): By 2 mm mm

Big comb: 3-15mm
Cutter width: 41 mm
Precision comb: 1-3 mm

Pallet Layer

Height: 24 cm
Width: 100 cm
Length: 120 cm

Ease of use

Display: Charging indicator
Zoom wheel
Adjustable guide combs
Cleans under the tap

