

PHILIPS

Wet and Dry electric shaver

Shaver series 5000

SteelPrecision blades

Power Adapt sensor

360 D Flexing heads

Integrated pop-up trimmer

S5585/35



Powerful shave, gentle on skin

with SkinIQ Technology

The Philips Series 5000 delivers a powerful shave, cutting now even more hair per stroke*. Equipped with advanced SkinIQ technology, the shaver senses and adapts to your hair density, for improved skin comfort.

A powerful shave

- More cutting performance in every stroke
- Follows the contours of your face
- Guides hair into the optimal cutting position

SkinIQ technology

- A shaver with the power to tame beards

For a convenient shave

- One-touch open for easy cleaning
- Choose a convenient dry or refreshing wet shave
- Even up your moustache and sideburns
- 60 minutes of shaving from a 1 hour charge
- A more intuitive shaving experience
- Fully charged in one hour

Sustainability

- The electric shaver with an Eco passport

Highlights

SteelPrecision blades



Powerful yet gentle, the 45 self-sharpening SteelPrecision blades on this Philips shaver complete up to 90,000 cutting actions per minute, cutting more hair per stroke** for a clean, comfortable finish.

Power Adapt sensor




The electric shaver has an intelligent facial-hair sensor that reads hair density 125 times per second. The technology auto-adapts cutting power for an effortless and gentle shave.

360 D Flexing heads



Designed to follow the contours of your face, this Philips electric shaver has fully flexible heads that turn 360° for a thorough and comfortable shave.

Hair-Guide precision heads

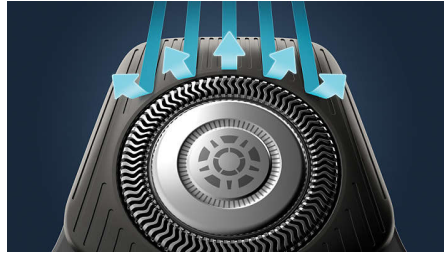


This new-shape precision shaver is enhanced with hair-guiding channels for optimal cutting and skin comfort.

One-touch open



Clean your electric shaver with the touch of a button. Simply flip open the shaver head and rinse with water.

Shave wet or dry

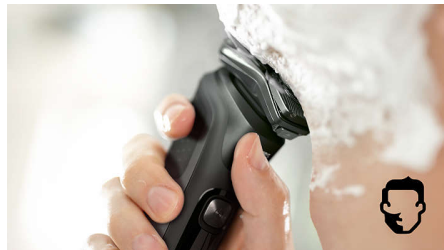

A wet and dry shaver that adapts to your preference. Choose a convenient dry shave, or pair with your favourite foam or gel for a refreshing wet shave.

Pop-up trimmer



Refine and define your moustache and sideburns with the pop-up trimmer—and complete your look with ease.

60 minutes of cordless shaving



A shaver for at home or on-the-go. Get 60 minutes of shaving time from a 1 hour charge or plug it in for instant and continuous power.

1 hour charging time



Fully charge your Philips shaver in just 1 hour with the powerful and energy efficient lithium-ion battery. In a hurry? Plug in your shaver for 5 minutes and get enough power for 1 full shave.

Specifications

Accessories

Maintenance: Cleaning brush
Charging stand
Integrated pop-up trimmer
Travel and storage: Travel case

Power

Charging: 1 hour full charge, 5-min quick charge
Battery type: Li-Ion
Automatic voltage: 100-240 V

Run time: 60 minutes
Stand-by power: 0.04 W
Max power consumption: 9 W

Design

Handle: Rubber grip
Colour(s): Midnight Blue
Shaving heads: Angular

Service

2 year warranty
Replacement head SH71: Replace every 2 yrs with SH71

Shaving Performance

Contour following: 360 D Flexing heads
Shaving system: SteelPrecision blades
SkinIQ technology: Power Adapt sensor

Ease of use

Display: LED display, Battery level indicator, Travel lock
Wet & Dry: Wet and dry use
Cleaning: One-touch open, Fully washable

