




Philips Hairclipper series  
9000  
Hair clipper

Self-sharpening metal blades  
60 length settings  
120 mins cordless use/1 h charge

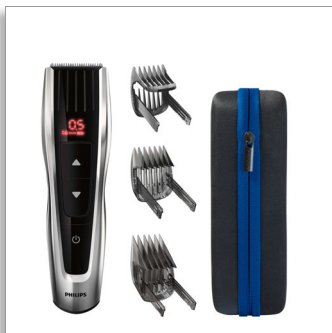

HC9420/15

## Philips' best

Ultimate power, Perfect haircut.

HAIRCLIPPER Series 9000 gives you total precision and control of your haircut with just one click. With motorised combs and a high-performance cutting element, it's the only clipper that consistently delivers the expected results.

### Easy to use

- Remembers the last used length setting
- Up to 120 minutes of cordless use

### Performance

- Motorised Combs for easy length selection
- Effortlessly adapts to thick hair
- Warranty for purchase protection
- Self-sharpening metal blades

### Ultimate precision and control

- Control buttons
- Easy to select and lock in 60 length settings: 0.5 to 42 mm
- Adjustable hair combs for the best clipping results

# PHILIPS

## Hair clipper

Self-sharpening metal blades 60 length settings, 120 mins cordless use/1 h charge

HC9420/15

# Highlights

### Control buttons

The intuitive user interface gives you precise feedback on the selected length. Use the buttons to easily select and lock in more than 60 length settings. Quickly browse through lengths or slowly go through each small step of 0.2 mm.

### 60 lock-in length settings



Use the Control Buttons to precisely select and lock in the length you want, with more than 60 length settings. Use the comb to trim with precisely 0.2 mm increments between 1 and 7 mm, and 1 mm between 7 and 42 mm. Or you can use it without the comb for a close 0.5 mm trim.

### 3 adjustable hair combs



The clipper comes with 3 adjustable hair combs: from 1 to 7 mm, 7 to 24 mm and 24 to

42 mm. Just attach one of the combs for more than 60 lock-in length settings, with precisely 0.2 mm increments between 1 and 7 mm, and 1 mm between 7 and 42 mm. Or you can use the clipper without the comb for a close 0.5 mm trim.

### Motorised Combs



The motor-powered length setting system easily selects and locks in the preferred length. The motor powers the comb and allows selecting between lengths with a precision of up to 0.2 mm. This innovative technology gives you the security of clipping all the time at the desired length and achieving consistent results time after time.

### Auto Turbo



The Auto Turbo feature automatically adapts to thicker hair, giving a little boost of extra power for an effortless cutting motion.

### Remembers last length setting



The comb goes back to the last used cutting length setting when the clipper is turned on.

### Powerful cordless use



Don't get tangled up in your cordless hair clippers – a 1 hour charge provides up to 120 minutes of powerful clipping time. Or keep it plugged in for uninterrupted trimming.

### 2-year worldwide guarantee



All of our grooming products are built to last. They come with a 2-year warranty, never need to be oiled and are compatible with any voltage worldwide.

### Self-sharpening metal blades

Self-sharpening metal blades for long-lasting sharpness

## Hair clipper

Self-sharpening metal blades 60 length settings, 120 mins cordless use/1 h charge

HC9420/15

# Specifications

### Cutting system

- Cutter width: 41 mm
- Cutting element: Stainless steel blades
- Number of length settings: 60
- Range of length settings: From 0.5 to 42 mm
- Precision (size of steps): 0.2 mm/1 mm
- Length selection: Control Buttons, Motorised Combs

### Accessories

- Pouch: Travel pouch
- Attachments: 3 hair combs

### Ease of use

- Maintenance-free: No oil needed
- Cleaning: Removable cutter
- Memory function

### Power system

- Motor: Auto Turbo
- Battery type: Li-Ion
- Operation: Corded and cordless
- Running time: 120 minutes
- Charging time: 1 hour

### Service

- 2-year worldwide guarantee



Issue date 2022-06-16

Version: 2.4.1

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Versus its Philips predecessor