

PHILIPS



Hair clipper

Hairclipper series 9000

5 click-on combs (2-3-5-7 mm)

Contour-following 2D shaver

61 min cordless use/1 h charge

Back-reach attachment



HC9420/15

Philips' best

Ultimate power, Perfect haircut.

HAIRCLIPPER Series 9000 gives you total precision and control of your haircut with just one click. With motorised combs and a high-performance cutting element, it's the only clipper that consistently delivers the expected results.

Easy to use

- Remembers the last used length setting
- Body groomer built to last with no oil required
- Up to 120 minutes of cordless use

Performance

- Motorised Combs for easy length selection
- Effortlessly adapts to thick hair
- Self-sharpening metal blades

Ultimate precision and control


- Control buttons
- Easy to select and lock in 60 length settings: 0.5 to 42 mm
- Adjustable hair combs for the best clipping results

Highlights

Control buttons

The intuitive user interface gives you precise feedback on the selected length. Use the buttons to easily select and lock in more than 60 length settings. Quickly browse through lengths or slowly go through each small step of 0.2 mm.

60 lock-in length settings

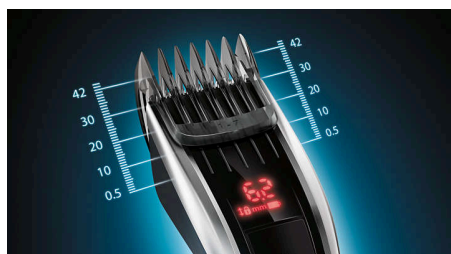

Use the Control Buttons to precisely select and lock in the length you want, with more than 60 length settings. Use the comb to trim with precisely 0.2 mm increments between 1 and 7 mm, and 1 mm between 7 and 42 mm. Or you can use it without the comb for a close 0.5 mm trim.

3 adjustable hair combs




The clipper comes with 3 adjustable hair combs: from 1 to 7 mm, 7 to 24 mm and 24 to 42 mm. Just attach one of the combs for more than 60 lock-in length settings, with precisely 0.2 mm increments between 1 and 7 mm, and 1 mm between 7 and 42 mm. Or you can use the clipper without the comb for a close 0.5 mm trim.

Motorised Combs



The motor-powered length setting system easily selects and locks in the preferred length. The motor powers the comb and allows selecting between lengths with a precision of up to 0.2 mm. This innovative technology gives you the security of clipping all the time at the desired length and achieving consistent results time after time.

Body groomer built to last with no oil required

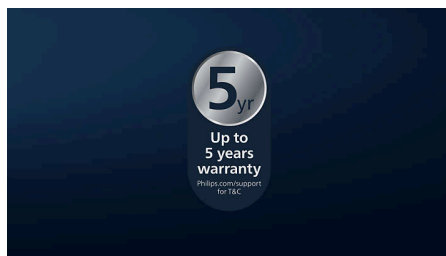

All of our body grooming products are built to last. They come with a standard global 2-year warranty, including the option to extend up to 5 years* and they never need to be oiled.

Auto Turbo



The Auto Turbo feature automatically adapts to thicker hair, giving a little boost of extra power for an effortless cutting motion.

Remembers last length setting



The comb goes back to the last used cutting length setting when the clipper is turned on.

Powerful cordless use



Don't get tangled up in your cordless hair clippers – a 1 hour charge provides up to 120 minutes of powerful clipping time. Or keep it plugged in for uninterrupted trimming.

Self-sharpening metal blades



Self-sharpening metal blades for long-lasting sharpness

Hairclipper series 9000

Hair clipper

HC9420/15

Specifications

Power system

Motor: Auto Turbo

Battery type: Li-Ion

Operation: Corded and cordless

Running time: 120 minutes

Charging time: 1 hour

Accessories

Pouch: Travel pouch

Attachments: 3 hair combs

Power

Low energy mode: < 0.3 W

Off mode (no attachments): < 0.1 W

Service

Up to 5-year guarantee

Cutting system

Cutting element: Stainless steel blades

Cutter width: 41 mm

Range of length settings: From 0.5 to 42 mm

Number of length settings: 60

Precision (size of steps): 0.2 mm/1 mm

Length selection: Control Buttons, Motorised Combs

Ease of use

Cleaning: Removable cutter

Maintenance-free: No oil needed

Memory function

