

PHILIPS

Auto Curler

ProCare Auto Curler

Titanium Ceramic Barrel

Brushless motor

3 heat & 3 timer settings

Salon style results

HPS940/13

Professional auto-curling for fabulous curls with brushless motor & titanium ceramic barrel

The Philips ProCare Auto Curler automatically makes consistently fabulous curls. The professional brushless motor and titanium ceramic heating barrel automatically rolls, heats and curls hair to create a perfect curl, everytime.

Easy to use


- Salon length 2.0m swivel cord
- Rapid heat-up time of just 30secs
- 3 adjustable curling directions
- Easy to curl, even at the back
- Heat proof styling
- Titanium ceramic barrel
- 3 heat & 3 timer settings for different hair types

Professional salon style results

- Professional brushless motor
- Professional auto-curling for fabulous curls

Highlights

Consistently fabulous curls

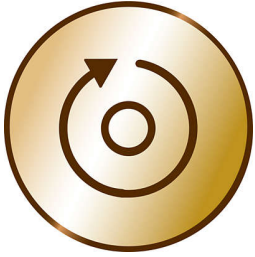

The Philips ProCare Auto Curler rolls the hair onto the heated barrel and releases a perfect curl, everytime.

Titanium ceramic barrel



Professional titanium barrel for fast curling, smooth gliding and shiny hair. The barrel's titanium ceramic coating combines excellent heat conduction with a super smooth surface to perfect curl creation.

Professional brushless motor



Durable professional brushless motor for creating curl in all different directions. Use for perfectly consistent right and left sided curls for a completely symmetrical look.

Alternatively use the automatic curl function for a mix of both curl directions for a completely natural look.

3 heat & 3 timer settings



The 3 heat settings (180°C-210°C-230°C) and 3 time settings (12sec - 10sec - 8sec) help you achieve great results from loose to tight curls on different hair types. For example, the high temperature setting with the extra curling time will shape the curls tighter – ideal for thicker hair. The low temperature setting combined with shorter curling time is optimal for hair that needs extra hair protection.

30sec. heat-up time



High performance heater for a rapid heat-up time of just 30secs.


Easy to curl at the back

The Philips ProCare Auto Curler has an ergonomic, sensitive design that makes it easy to create perfectly consistent curls all over your head, even at the back.

Heat proof styling

Our new improved chamber means no burns during styling. Unlike with traditional curlers, you'll never singe your fingers because our clever design completely isolates heat from any other areas than treated hair.

2.0m cord

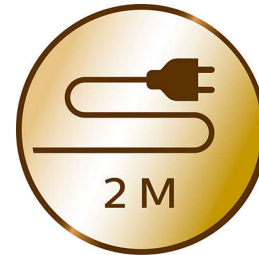

The salon style long 2.0m cord ensures improved flexibility and ease of handling. This salon recommended cord makes it easy for you to use the Philips ProCare Auto Curler wherever you want and gives you plenty of space to achieve the look you want.

3 curling directions

3 adjustable curling directions (left, right and automatic) add more creativity to your curling routine. Right curls, left curls – so you can curl each side in perfect symmetry – or automatic curls to mix of right and left sided curls for a completely natural look.

Specifications

Technical specifications

Cord length: 2.0 m

Voltage: 110-240 V

Heat-up time: < 30 seconds

Maximum temperature: 230 °C

Motor: Brushless motor

Temperature settings: 180°C - 210°C - 230°C

3 curling directions: Right - Alternate - Left

Timer settings: 8sec - 10sec - 12sec

Accessories

Barrel cleaning accessory

Sectioning accessory

Features

Auto shut-off: after 60 min

Hanging loop

Swivel cord

Titanium ceramic coating

Beep sound for curl ready

Service

2-year worldwide guarantee

Consumer Trade Item

Height: 15

Width: 35

Length: 11

Net Weight: .623

Gross Weight: .865

GTIN: 08710103791928

Country of origin: CN

Harmonized system code: 851632

Outer Carton

Height: 32.1

Width: 23.6

Length: 36.2

Gross Weight: 3.97

GTIN: 18710103791925

