

PHILIPS

NORELCO

Beard and stubble trimmer

Beardtrimmer series 1000

Stainless steel blades

30 min cordless use/8h charge

USB charging

3 stubble, beard and hair combs

BT1208/70



Self-sharpening steel blades

For durable performance

The Philips Norelco Beard Trimmer 1000 is a beard and stubble trimmer which also cuts hair. It features self-sharpening steel blades for durable performance, and the convenience of USB charging for 30 minutes of cordless use. Includes 4 stubble and beard combs that also work on hair.

Easy to use

- Easy to grip
- Detacheable head for easy cleaning
- Up to 30 minutes of cordless use, with an 8-hour charge
- Light on the device indicates when battery is charging
- USB charging
- Travel lock prevents trimmer from accidentally starting

Built to last

- Warranty for purchase protection

Trimming performance

- Self-sharpening steel blades for durable performance
- 3 impact-resistant combs for beard and stubble
- Skin-friendly blades for smooth skin

Highlights

Self-sharpening steel blades




The trimmer's steel blades self-sharpen by lightly brushing against each other as they trim. This keeps the blades extra sharp and effective, for durable performance.

USB charging



Includes a USB cable for convenient charging (adapter not included).

30 min cordless use

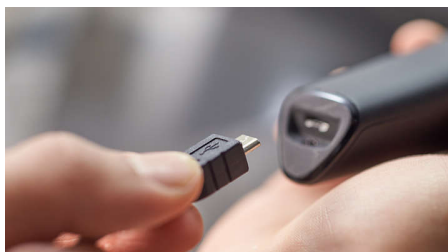

Features the convenience of USB charging, for 30 minutes of cordless use.

3 impact-resistant combs



3 impact-resistant combs for beard and stubble: 1mm (3/64"); 3mm (1/8"); 5mm (3/16").

Battery charging indicator



The device features a light, which indicates when the battery is charging.

Skin-friendly blades



Get smooth contact with the skin, as the blades have rounded tips that prevent scratches and irritation.

Travel lock



The travel lock prevents the appliance from being switched on by accident.

Easy to clean



Detachable head, for easy cleaning. Cleaning brush included. No oil required.

Ergonomic design



A fast trimmer that's comfortable to hold and use. So you can handle those hard-to-reach areas more easily.

Specifications

Accessories

Comb: 1 stubble comb (1mm), 2 beard combs (3, 5 mm)

Maintenance: Cleaning brush

Power

Charging: 8 hours full charge, USB charging

Run time: 30 minutes

Automatic voltage: 100–240 V

Battery Type: NiMH

Adaptor: Not included

Design

Handle: Ergonomic Easy Grip

Service

2-year warranty

No oil needed

Cutting system

Cutter width: 32 mm

Cutting element: Stainless steel blades

Precision (size of steps): By 1mm

Non-scratching teeth: For more comfort

Ease of use

Display: Charging indicator

Cleaning: Dry cleaning with brush

Operation: Cordless use

Travel lock

