



Philips Beardtrimmer
series 7000
Vacuum Beard Trimmer

0.5mm precision settings
Full Metal Trimmer
60 min cordless use/1h charge
Captures up to 90% cut hair*



BT7206/13

Less mess vacuum trimmer

Integrated vacuum captures up to 90% cut hair*

Trim your beard, mustache and sideburns while keeping tidy with this trimmer. Its powerful vacuum catches cut hair as you go along, giving you a mess-free trim.

Easy to use

- Simple maintenance
- 2 year guarantee, worldwide voltage and no need to oil
- Lights indicate when battery is low, empty, full or charging
- Adjusts to different length settings
- 60 minutes run time after a 1-hour charge or plug it in

Even trimming results

- Double-sharpened stainless steel blades for faster trimming
- Skin-friendly, high-performance blades for the perfect trim
- Lifts and guides hairs for an effortless even trim

Vacuum system

- Guaranteed less mess with integrated vacuum

PHILIPS

Vacuum Beard Trimmer
0.5mm precision settings Full Metal Trimmer, 60 min cordless use/1h charge, Captures up to 90% cut hair*

BT7206/13


Highlights

Integrated vacuum system



Trim your beard, mustache and sideburns while keeping tidy with this trimmer. Its powerful vacuum catches cut hair as you go along, giving you a mess-free trim.

Innovative lift & trim system

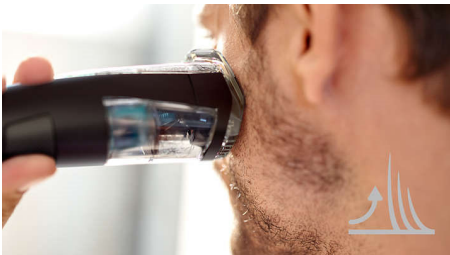

Trim your stubble in one quick stroke. Our innovative lift & trim system raises each hair, then guides it toward the double-sharpened stainless steel blades. The result is an even stubble or trim in just one go.

Double-sharpened blades




Strong steel blades are double-sharpened and made to last a very long time to cut through even thick hair. They sharpen themselves by lightly brushing against each other as you trim.

20 lock-in length settings



Cut to the exact length you're after. Just spin the precision dial to one of 20 length settings between 0,5 - 10mm in 0.5mm increments.

Skin-friendly blades

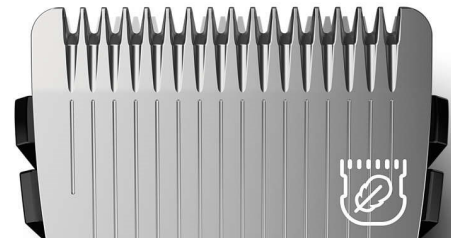

Get a perfect yet protective trim, time after time. The beard trimmer's steel blades lightly brush against one another, sharpening themselves as they trim so they stay extra sharp and effective. They also have rounded tips and combs to help prevent skin irritation.

Corded and cordless use



Charge your beard trimmer for 1 hour to get 60 minutes of cordless use. If you need more energy while trimming, you can simply plug the trimmer into the wall. This trimmer has been designed to run both cordless and plugged in.

Battery indicators



The battery indicators in this trimmer let you know what your battery status is: Low, empty, charging or full. This way, you can charge your trimmer on time and fully, so you won't end up with an empty battery in the middle of your trim.

Easy to clean



Detach the head of your Philips beard trimmer and rinse it under the tap for easy cleaning. Then dry it before you put it back on the appliance.

Built to last



We back this Philips trimmer with a 2-year guarantee: our grooming products are built to last. You'll never need to oil it, and it's compatible with all worldwide voltages.

Specifications

Create the look you want

- Number of length settings: 20 integrated length settings

Cutting system

- Cutting element: Stainless steel blades
- Range of length settings: 0.5 up to 10 mm
- Precision (size of steps): By 0.5 mm

Design

- Color: Black

Accessories

- Pouch: Storage pouch
- Maintenance: Cleaning brush

Ease of use

- Display: Battery light
- Zoom wheel: Easily adjust length settings
- Cleaning: Rinseable attachments
- Operation: Corded & Cordless use

Power

- Run time: 60 minutes
- Automatic voltage: 100-240 V
- Charging: 1 hour full charge
- Battery Type: NiMH

Service

- 2-year guarantee
- No oil needed



Issue date 2023-01-14

Version: 2.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Tested in lab environment on hair mats