

# PHILIPS

Epilator, mini epilator, tweezers

Satinelle Essential

For legs, body and face

HP6549/01



## Enjoy long-lasting smooth skin in all body areas

### Trio smooth set

Enjoy fast hair removal on legs and arms with the Satinelle epilator and delicate, precise epilation on armpits and bikini area with the mini epilator. Use the tweezers for facial touch ups or brows.

#### Long lasting smoothness

- Efficient root hair removal

#### Dedicated solution per body area

- Fast epilation solution for legs and arms
- Delicate epilation solution for sensitive areas
- Matching tweezers for facial touch-ups and brows

#### Easy maintenance

- Cleaning brush included and washable epilation head.
- Small pouch for easy storage.

# Highlights

## Efficient root hair removal




Our epilators have uniquely designed precision discs that catch even the shortest hairs (0.5mm). That's hairs 4 x shorter than with wax, for up to 4 weeks of hair-free skin.

## Epilator for legs & arms




The Satinelle epilator has a large head for fast epilation on legs and arms. Its rounded shape fits perfectly into your hand for comfortable hair removal.

## Cordless mini epilator

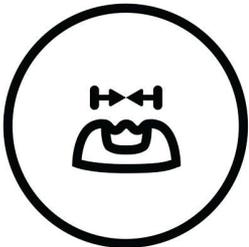

The mini epilator has a narrow head specifically designed to catch hairs in hard to reach areas without pulling skin. It's battery operated for maximum convenience.

## Precise face tweezer solution

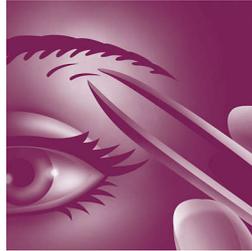

The set comes with matching tweezers ideal for removing hairs on face (upper lip, jaws) or for shaping eyebrows.

## Easy cleaning



A cleaning brush is included to remove loose hairs from epilator discs. Washable epilation heads ensure hygiene.

## Storage bag

Small pouch for easy storage.

# Specifications

## Technical specifications

**Number of catching points:** Epilator: 20, Mini epilator: 12

**Color(s):** Purple deco, White

**Wattage:** Epilator: 5W, Mini epilator: 5 W

**Number of discs:** Epilator: 21

**Frequency:** Epilator: 50-60 Hz

**Voltage:** Epilator: 13 V, Mini epilator: 3 V, Adapter: 13 V / 400 mA,

**Pulling actions/second speed 1:** Epilator: 600

**Number of tweezers:** Mini epilator: 8

**Rotations per minute:** Mini epilator: 4000

**Catching actions per minute:** Mini epilator: 32,000

## Features

**Speed settings:** 1 setting

**Gentle tweezing discs**

## Accessories

**Pouch:** Basic pouch

**Cleaning brush**

## Ease of use

**Handle:** Ergonomic

## Power

**Battery Type:** Mini epilator: 2x AA

## Performance

**Epilation discs:** Metal discs

**Epilator head:** Epilator: 23.5 mm, Mini epilator: 10 mm, Washable

## Service

**Guarantee:** 2 years

