

PHILIPS

NORELCO

Face + Body

OneBlade

Trim, edge, shave

For any length of hair

1x blade for face, 1x for body

4 stubble combs, 1 body comb



Trim, edge and shave any length of hair

Designed to cut hair, not skin

Philips Norelco OneBlade Face + Body trims, edges and shaves any length of hair. You get a blade for your face, and one with a skin guard for your body. Forget about using multiple tools. OneBlade does it all.

Easy to use

- Each blade lasts 4 months
- Use wet or dry
- Charge up and go

Comfortable shave

- Shave it off
- Guards against nicks on sensitive areas
- Unique OneBlade technology

Sharp edges

- Edge it up
- Create precise edges and sharp lines

Even trim

- Easily trim in any direction
- Stubble combs for more choices
- Trim it down

QP2630/70

Highlights

Unique OneBlade Technology



Designed for facial styling and body grooming, the Philips Norelco OneBlade trims, edges and shaves any length of hair. It delivers an easy and comfortable shave thanks to a glide coating and rounded tips. And with a cutter that moves at 200x per second, it's efficient even on longer hairs.

Trim it down




Trim to your preferred stubble length. Your Philips OneBlade comes with 4 stubble combs for a 5 o'clock, tight trim or long stubble.

Edge it up



Get precise lines in seconds with the dual-sided blade that enables you to see every hair you're cutting.

Shave it off

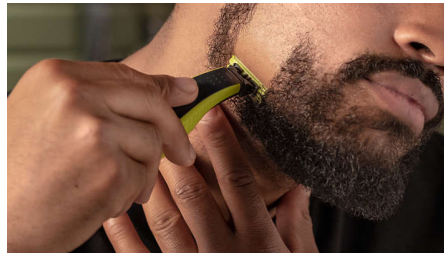


The OneBlade shaver doesn't shave as close as a traditional blade, ensuring your skin stays comfortable. Go against the grain and shave off any length of hair easily.

Guard



Attach the skin guard for an extra layer of protection on sensitive areas of the body.

Click-on body comb

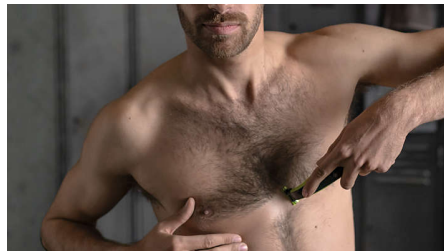

Simply attach the 3mm body comb to trim in any direction.

4 click-on stubble combs



Get your preferred stubble length using one of the 4 included stubble combs at 1, 2, 3 or 5mm.

Dual-sided blade



OneBlade follows the contours of your face, allowing you to easily and comfortably trim and shave all areas. Use the dual-sided blade to style your edges and create clean lines by moving the blade in any direction.

Durable OneBlade



Easily replace your blade once every 4 months* for optimal performance. A green useage indicator will appear once the blade is worn out.

Specifications

Trimming & shaving performance

Shaving system: Contour-following technology, Dual protection system

Trimming system: Contour-following technology

Accessories

Comb: 4 stubble combs (1, 2, 3, 5mm), Click-on skin guard, Click-on body comb

Maintenance: Storage cap

Extra replaceable blade

Power

Battery type: Lithium-ion

Charging: 4 hours full charge

Run time: 60 minutes

Automatic voltage: 100–240 V

Max power consumption: 2 W

Design

Handle: Ribbed rubber grip

Color: Lime green, charcoal grey

Service

2-year warranty: On the handle

Replacement head: QP210, QP220, QP610, QP620, Replace every 4 months*

Ease of use

Charging: Rechargeable

Display: Battery full indicator, Battery low indicator, Charging indicator

Wet and dry use

