



Philips Norelco  
do it yourself hair clipper

**180° rotating head**  
corded & cordless

**QC5530/40**

## Cut your own hair

Even in hard-to-reach-areas

A perfectly smooth and precisely shaved head with the Philips Norelco do-it-yourself hair clipper.

### Easy to use

- 100% waterproof for easy cleaning
- 2-year guarantee, worldwide voltage.

### Shave or trim. Perfect results without help.

- 180° rotating head for 100% reach
- Contour-following combs for speed and comfort
- Adjustable zoom ring for easy length settings
- A wide range of length settings from 1 to 30mm
- Quick Charge Power System: 1hr/60 minutes cordless use
- Skin-friendly blades and combs are gentle to the skin
- Corded and cordless use
- Battery charging, full and low indication
- Lubrication for life
- Self-sharpening blades
- Precision trimmer attachment for finishing and side burns

**PHILIPS**  
**NORELCO**


# Highlights

## 180° rotating head



Makes trimming or shaving your own head easier than ever. Simply select the right angle to comfortably reach all parts of your head without help.

## Precision trimmer

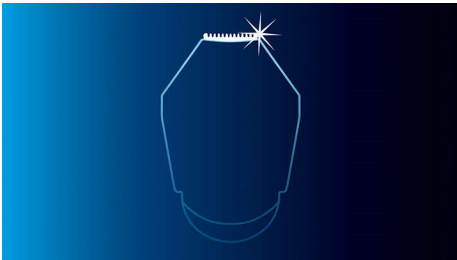


Use the precision trimmer to neatly trim side burns and hair line for a sharp finish.

## Quick charge battery




The lithium-ion battery is fully charged in 1 hour and provides constant power for up to 60 minutes cordless use.

## 100% Washable

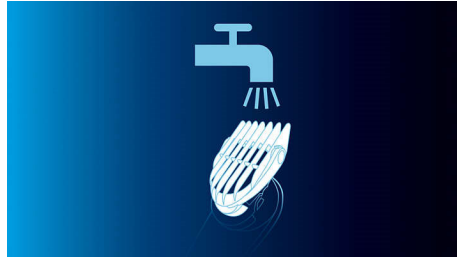


Conveniently washes under the tap for a thorough clean.

## Length settings from 1-30mm

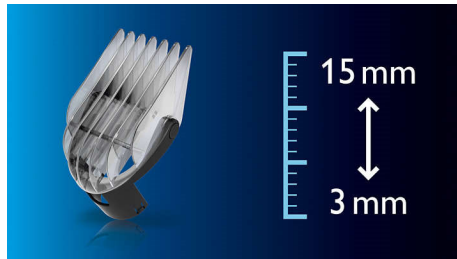


Cut your own hair easily and accurately, using the precision comb for lengths between 1 and 3mm, the regular comb for 3 to 15mm or the big comb for 15 to 30mm.

## Adjustable zoom ring

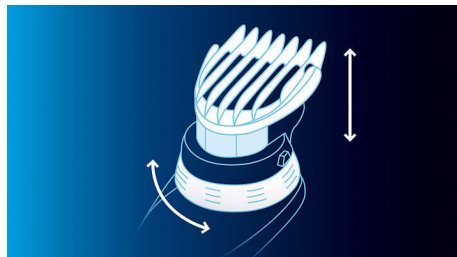

Easily select and set your desired hair length by turning the integrated zoom ring. The length settings are clearly visible on the side of the combs.

## 2D Contour-following comb

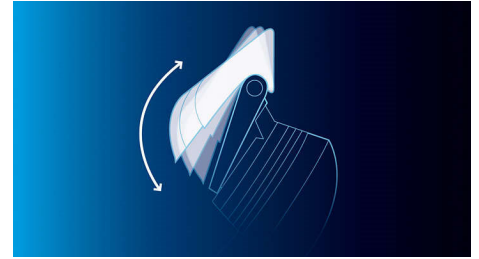


The 2D combs gently follow the contours of your head for a smooth, even and comfortable hair cut.

## Skin-friendly



Rounded edges on the blades and combs are designed to avoid scratching the skin for a more comfortable experience.

## Corded and cordless use

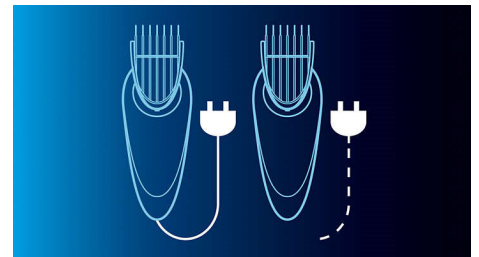

For flexibility and convenience the headroom can be used with or without the power cord.

# Specifications

## Design

- Shape: Ergonomic

## Cutting system

- Cutter width: 41 mm
- Cutting element: Stainless steel blades
- Number of length settings: 18
- Range of length settings: from 1 to 30 mm
- Precision (size of steps): By 2mm mm
- Comb type: Contour following
- Precision comb (1 to 3 mm)
- Big comb (15 to 30 mm)
- Precision trimmer
- Small comb (3 to 15 mm)

## Ease of use

- Zoom wheel

- Display: Charging indicator
- Adjustable guide combs
- Cleans under the tap

## Accessories

- Cleaning brush
- Precision trimmer
- 3 guide combs

## Power system

- Battery type: Li-ion
- Running time: 60 minutes
- Charging time: 1 hour
- Usage: Corded/cordless

## Service

- 2-year worldwide guarantee



Issue date 2023-03-06

Version: 16.2.1

EAN: 00 75020 01637 9

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)