

PHILIPS

Wet & Dry epilator

Satinelle Advanced

For legs, body and face

Ceramic discs grip fine hairs

S-shaped handle design

+ 8 accessories



BRE640/50

Our fastest epilation even on the finest of hairs 3 body care routines

Our fastest ever epilator has unique ceramic discs that rotate at a greater speed than ever before and firmly grip fine and short hairs. You can now smoothen your skin before and after epilating by treating all your different body areas.

Easy and effortless usage

- First epilator with S-shaped handle
- Cordless wet and dry for use in bath or shower
- Opti-light helps you target and remove even trickiest hairs

Exceptional results

- Extra wide epilator head
- Epilation head of unique ceramic material for better grip

Personalized body and face care routines

- Shaving head and trimming comb for a close shave
- Includes trimming head and bikini comb
- Facial area and delicate area cap to remove unwanted hairs
- Includes massage cap
- Includes skin stretcher

Satinelle Advanced

Wet & Dry epilator

BRE640/50

Highlights

Our fastest epilation ever



Our epilator head is unique in being made from a textured ceramic surface that gently extract even the finest hairs and those 4x shorter than wax. Now with faster disc rotation than ever before (2200RPM) for our fastest hair removal.

Extra wide epilator head



Extra wide epilator head covers more skin with every stroke for faster hair removal.

Ergonomic S-shaped handle


The ergonomic S-shaped handle is easy to steer for maximum control and better reach with natural and precise movements, all over your body.

Cordless wet and dry usage



Designed with an anti-slip grip, ideal for use with water. Enables a more comfortable, gentle experience in your shower or bath. You can use it cordless for best convenience.

Opti-Light

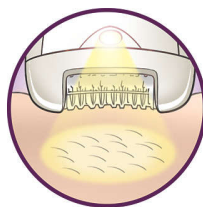

Opti-light helps you target and remove even trickiest hairs

Shaving head and trimming comb



The shaving head provides a close shave and more gentleness in different body areas. It comes with a trimming comb to style your bikini area.

Trimming head and bikini comb

It includes a trimming head and bikini comb to trim and shape delicate areas for more convenience.

Facial and delicate area cap

For more gentleness in all different body areas it includes a facial area cap to easily remove unwanted facial hairs and a delicate area cap for hair from underarm and bikini

Massage cap



Massage cap eases the epilation sensation.

Skin stretcher



Skin stretcher cap tightens skin during epilation.

Specifications

Accessories

Cleaning brush
Bikini trimmer head
Bikini trimmer comb
Trimming comb
Facial area cap
Delicate area cap
Massage cap
Skin stretcher cap
Shaving heads

Power

Charging: Rechargeable, 1.5 hour charging time
Battery type: Lithium-ion
Quick charge
Usage time: up to 40 minutes

Technical specifications

Number of catching points: 32
Number of discs: 17
Pulling actions/second speed 1: 960
Voltage: 15V / 5.4W
Pulling actions/second speed 2: 1066
Tweezing action speed 2: 70400 per minute
Tweezing action speed 1: 64000 per minute

Features

Speed settings: 2 settings

Ease of use

Cordless
Wet & Dry
Handle: Ergonomic
Opti-light

Performance

Epilation discs: Ceramic discs
Epilation system: Patented epilation system
Epilator head: Extra wide

