

# PHILIPS

Wet & dry electric  
shaver

Shaver series 7000  
SensioTouch

DualPrecision & GyroFlex2D

50 min cordless use/1h charge

Precision Trimmer and Pouch

Jet clean system

RQ1160/22


# Highlights

## Dual Precision blades



DualPrecision blades comfortably shave both long hairs and short stubble. 1. Slots cut long hairs. 2. Holes cut stubble

## Super Lift and Cut

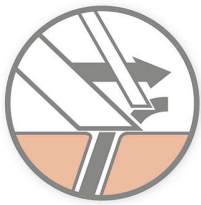

The dual blade system built into the Philips electric shaver lifts hairs to cut comfortably below skin level for a closer shave.

## GyroFlex 2D



GyroFlex 2D contour-following system of the shaver adjusts easily to the curves of your face, minimizing pressure and irritation for a close shave.

## Aquatec Wet and Dry



The Aquatec wet & dry seal of the electric shaver lets you choose how you prefer to shave. You can get a comfortable dry shave or a refreshing wet shave using a shaving gel or foam for extra skin comfort.

## Fully washable shaver



Simply pop the heads open, and rinse thoroughly under the tap.

## SkinGlide



The low-friction SkinGlide shaving surface of the electric shaver slides smoothly along your skin for a close easy shave.

## Cordless use - 50 mins



An energy-efficient, powerful lithium-ion battery gives you more shaves per charge. Charge it for an hour and you'll have up to 50

minutes of shaving time. Charge it for 3 minutes and you'll have enough power for one shave.

## 2 level battery indicator

The multi-level LED display shows when the battery is low, when you need a new head and when the travel lock is on. Travel lock prevents the product from turning on by accident. Press any button for 3 seconds to activate the travel lock, so the product doesn't get turned on accidentally. A red lock symbol shows when the travel lock is on.

## Click-on trimmer



Perfect your look with the SmartClick skin-friendly precision trimmer. It's ideal for maintaining a moustache and trimming sideburns.

## Jet Clean system



The Jet Clean system keeps your shaver in perfect condition for a superior shave day after day. The blades and heads are thoroughly cleaned and lubricated. It also fully charges the shaver in only 1 hour. Includes 1 bottle of Jet Clean solution, for up to one month of cleaning. Jet clean solution is a water-based cleaning fluid that thoroughly cleans and also lubricates the shaving heads - making every shave feel like the first.

## Charging stand

The foldable charging stand is designed to fit into even the smallest spaces, so you can charge it wherever you want and easily take it with you when you travel.

# Specifications

## Shaving Performance

**Shaving system:** DualPrecision System, Super Lift & Cut technology

**Contour following:** GyroFlex 2D contour following

**SkinComfort:** SkinGlide

**Styling:** Skin friendly precision trimmer

## Accessories

**Maintenance:** Cleaning brush, Protective cap

**Pouch:** Soft pouch

## Design

**Finishing:** Brushed chrome deco ring, LED Display

## Ease of use

**Display:** 2 level battery indicator, Battery full indicator, Battery low indicator, Charge indicator, Quick charge indication

**Charging:** 1 hour, Rechargeable, Quick charge 3 min for 1 shave

**Wet & Dry:** Wet and dry use

**Cleaning:** Washable

**Shaving time:** Up to 50 minutes

**Jet Clean:** Includes Jet Clean unit

## Power

**Battery Type:** Lithium-ion

**Automatic voltage:** 100–240 V

## Service

**Replacement head:** Replace every 2 yrs with RQ11

**2-year guarantee**

