

PHILIPS

Wet & Dry epilator

Satinelle Advanced

For legs, body and face

6 accessories

Cordless and rechargeable

S-shaped handle design



BRE630/50



Firm hair grip for easy, comfortable epilation

Complete epilation kit for the legs, body & face

Effective yet comfortable epilation for smooth skin. 6 accessories including a shaver head for a personalized hair removal treatment. Micro-ridged ceramic discs are gentle against the skin as they firmly grip even the finest hair.

Easy and effortless usage

- Wet & dry use for maximum convenience
- Chargeable battery for 40 min cordless use & indicator light
- Unique built-in light for greater visibility of fine hairs
- First epilator with S-shaped handle

Thorough results

- Epilation head of unique ceramic material for better grip
- Patented epilation system
- 2 speed settings to grab thinner and thicker hairs
- Widest head to grab more hairs in a single pass
- Always use at a 90 degree angle for the best performance

Personalized hair removal solutions

- Shaving head and comb for a close shave
- In-use Massage cap relaxes the skin during epilation
- Facial and Delicate area caps remove hair in sensitive areas


Highlights

Ergonomic S-shaped handle




The ergonomic S-shaped handle is easy to steer for maximum control and better reach from head-to-toe.

Micro-ridged ceramic discs

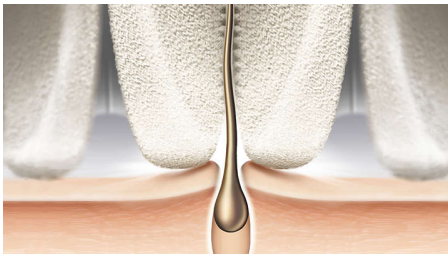

The epilator head is made from a unique ceramic material with a micro-ridged surface that firmly grabs the hair so even your finest hairs won't slip from its grip.

Widest epilation head

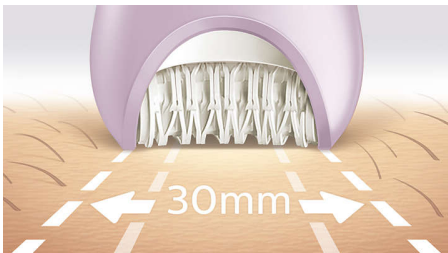

Widest epilation head grabs more hairs in a single stroke for optimal long-lasting hair removal results.

Patented epilation system



Philips' patented epilator system gathers hairs that are lying flat, guides them to the pulling point and firmly removes them. Combined with perfectly round ceramic discs, it epilates closer to the skin and provides even more gentleness.

Wet and dry use



For gentle and comfortable use during your shower or bath routine with an anti-slip grip.

Opti-light



Unique built-in light ensures less hairs are missed for a more effective epilation.

90 degree angle



The Philips Satinelle will always give you the best performance when used at a 90 degree angle.

Shaving head and comb



The shaving head and comb provide a close shave and more gentleness in different body areas.

Facial and Delicate area caps



For more gentleness from head to toe, the Facial cap removes unwanted facial hair and the Delicate area cap removes hair from the underarms and bikini area.

Specifications

Accessories

Pouch: Basic pouch
Cleaning brush
Shaving head
Shaving head comb
Facial cap
Delicate area cap
In-use massage cap

Power

Charging: 5 min quick charge, Rechargeable, 1.5 hour charging time
Battery Type: Lithium-ion
Usage time: up to 40 minutes

Technical specifications

Number of catching points: 32
Number of discs: 17
Pulling actions/second speed 1: 960
Voltage: 15V / 5.4W
Pulling actions/second speed 2: 1066

Features

Speed settings: 2 settings

Ease of use

Handle: S-shape handle
Cordless
Wet and dry use
Opti-light

Performance

Epilation discs: Ceramic discs
Epilator head: 30 mm
Epilation system: Patented epilation system

