

PHILIPS



Hair Dryer

5000 Series

2300W

ThermoShield technology

4x ionic care*

3 heat & 2 speed settings



BHD510/03

Fast drying with no heat damage** with ThermoShield technology

ThermoShield technology gives you ultimate protection from heat damage, by actively controlling the air temperature of the dryer to an optimum level.

Beautifully styled hair

- Precise control with 6 heat and speed settings
- Cool Shot to set your style
- Slim nozzle for touch-ups and detailed styling

Care and protect

- A powerful motor creates air speeds of up to 110 km/h****
- 4x ionic care* for shiny, frizz-free hair

Powerful drying

- 20%*** faster drying with a powerful 2300W airflow

ThermoShield technology

- ThermoShield technology for ultimate heat protection


5000 Series

Hair Dryer

BHD510/03

Highlights

ThermoShield technology

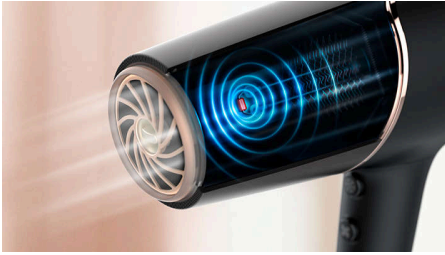

The overheat detect sensor actively optimizes and controls the air temperature, protecting your hair from damage** caused by overheating. Enjoy a stress-free drying experience with ThermoShield technology.

20%*** faster drying



A more powerful airflow of 2300W makes drying 20%** faster, while still protecting your hair.

110 km/h air speed****




This hairdryer's high-performance motor has been developed for the professional market. It generates an air speed of up to 110 km/h****, for fast drying and impressive styling.

4x ionic care*



This ultra-powerful ionic system emits up to 80 million ions per drying session, creating frizz-free, shiny hair.

6 heat and speed settings

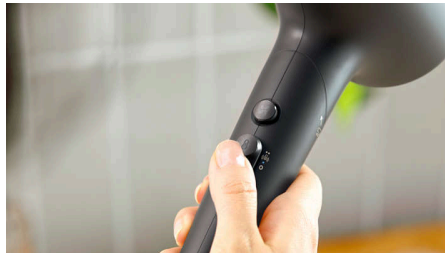

Easily pick the combination of heat and speed that works best for your hair and style. Six different settings ensure precise control for tailored styling.

Cool Shot



The Cool Shot button provides an intense burst of cool air. It is used after styling to finish and set the style.

11 mm styling nozzle



The slim nozzle precisely focuses the air, for quick touch-ups and perfecting small details of your style.

5000 Series

Hair Dryer

BHD510/03

Specifications

Attachments

Nozzle: 11 mm
Volume diffuser

Technical specifications

Cord length: 1.8 m
Wattage: 2300 W
Voltage: 220-240 V
Motor: DC
Color / Finishing: Blue & Metallic

Consumer Trade Item

Height: 28.5 cm
Width: 54 cm
Length: 28.5 cm
Net weight: 0.72 kg
Gross weight: 1.25 kg

GTIN: 8720689003223
Country of origin: CN
Harmonized system code: 85163100

Outer Carton

Height: 24.8 cm
Width: 34.6 cm
Length: 63.2 cm
Net weight: 4.278 kg
Gross weight: 6.257 kg
GTIN: 18710103977152

Features

Storage hook
Heat/Speed settings: 6
Cool shot

Service

2-year worldwide warranty

Pallet Layer

Height: 24.8 cm
Width: 70 cm
Length: 98.2 cm

Caring technologies

4x Ion technology: *
ThermoShield technology

