

PHILIPS

NORELCO

Beard and stubble
trimmer

Beardtrimmer series
1000

Stainless steel blades

60 min cordless use/8h charge

USB charging

4 stubble and beard combs



BT1217/70

Self-sharpening steel blades

For durable performance

Features self-sharpening steel blades for durable performance, and the convenience of USB charging for 60 minutes of cordless use. Includes 4 stubble and beard combs.

Easy to use

- Easy to grip
- Detacheable head for easy cleaning
- Up to 60 minutes of cordless use, with an 8-hour charge
- Travel lock prevents trimmer from accidentally starting
- USB charging
- Lights indicate when battery is low or charging

Built to last

- Warranty for purchase protection

Trimming performance

- Self-sharpening steel blades for durable performance
- 4 impact-resistant combs for beard and stubble
- Skin-friendly blades for smooth skin

Highlights

Self-sharpening steel blades




The trimmer's steel blades self-sharpen by lightly brushing against each other as they trim. This keeps the blades extra sharp and effective, for durable performance.

USB charging



Includes a USB cable for convenient charging (adapter not included).

60 min cordless use

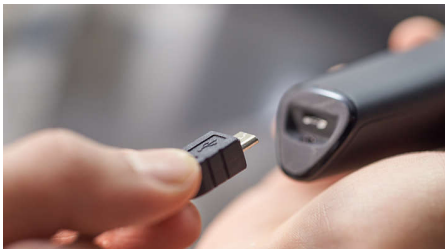

Features the convenience of USB charging, for 60 minutes of cordless use.

4 impact-resistant combs



4 impact-resistant combs for beard and stubble: 1mm (3/64"); 2mm (5/64"); 3mm (1/8"); 5mm (3/16").

Battery indicators



The device features a light, which indicates when the battery is low or charging. The low-battery indicator helps ensure you don't run out of a charge mid-trim.

Skin-friendly blades




Get smooth contact with the skin, as the blades have rounded tips that prevent scratches and irritation.

Travel lock



The travel lock prevents the appliance from being switched on by accident.

Easy to clean

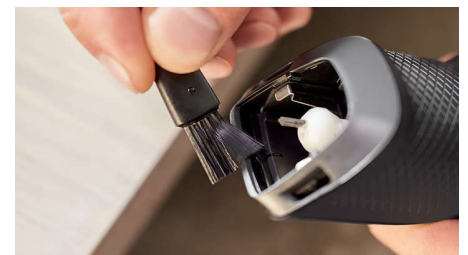

Detachable head, for easy cleaning. Cleaning brush included. No oil required.

Ergonomic design



A fast trimmer that's comfortable to hold and use. So you can handle those hard-to-reach areas more easily.

Specifications

Accessories

Pouch: Travel pouch

Comb: 2 stubble combs (1, 2 mm), 2 beard combs (3, 5 mm)

Maintenance: Cleaning brush

Power

Charging: 8 hours full charge, USB charging

Run time: 60 minutes

Automatic voltage: 100-240 V

Battery Type: NiMH

Adaptor: Not included

Design

Handle: Ergonomic Easy Grip

Service

2-year warranty

No oil needed

Cutting system

Cutter width: 32 mm

Cutting element: Stainless steel blades

Precision (size of steps): By 1mm

Non-scratching teeth: For more comfort

Ease of use

Cleaning: Dry cleaning with brush

Display: Battery low indicator, Charging indicator

Operation: Cordless use

Travel lock

