

Philips StyleCare
SplitStop Curler

38mm extra large barrel

SplitStop Technology
Keratin infusion
Digital temperature settings

BHB869/03



Put your curls in the spotlight

Up to 95% split free-ends*

Philips SplitStop curler is designed to keep your hair split-free. Thanks to our UniTemp sensor and SplitStop Technology you can create those curls without worry. So hide no more and step into the spotlight!

Ease of use

- Cool tip for easier and safer use
- Fast heat up time, ready to use in 60 sec
- Key-lock function to avoid unintentional switching
- Swivel cord to prevent tangled wires
- Auto shut-off for safe usage
- 1.8 m power cord
- Safety stand for ease of use
- 30% more styling space on the barrel for long or thick hair

Beautifully styled hair

- Up to 200°C for perfect results
- 38mm extra large barrel for loose curls

Less split ends

- Keratin infusion for better care
- SplitStop Technology for ultimate split ends prevention

PHILIPS

Highlights

SplitStop Technology



Our secret to ultimate split ends prevention is the new SplitStop Technology. It is a unique combination of optimized heat performance and minimized friction level to respect the health of your hair from roots to tips. There are no sudden temperature changes which ensures the optimum heat is delivered constantly and evenly along the barrel when you style. The barrel is coated with smooth ceramic to reduce the traction on hair strands. Create perfect curls with healthier ends full of new life.

Keratin infusion



Keratin is the hair's essential ingredient which makes them strong, healthy and gorgeous looking. The ceramic is enriched with keratin to even better take care of your hair.

Digital temperature settings

Digital display with 8 temperature settings gives you absolute control to adjust temperature to your hair type for damage prevention.

Up to 200°C



High temperature enables you to change the shape of your hair and get the curly look you want.

38mm extra large barrel



38mm extra large barrel for loose curls

30% more styling space



Increased styling space on the barrel for easier curling even long or thick hair.

Cool tip




The tip of the styler is made from a special heat insulating material to keep it cool; you can safely hold it while you're styling for optimal ease of use.

Safety stand



The safety stand enables you to put the curler down safely during use

Fast heat up time

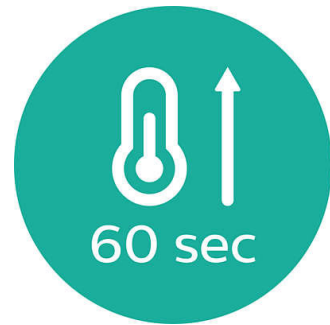

This styler has a fast heat up time, being ready to use in 60 seconds.

Specifications

Technical specifications

- Voltage: Worldwide V
- Cord length: 1.8 m
- Heat-up time: 60 sec
- Barrel coating: Keratin Ceramic
- Barrel size: 38mm
- Number of heat settings: 8
- Temperature range: 130 °C - 200 °C
- Type of temperature control: LCD

Features

- Auto shut-off: after 60 min
- Key lock
- Swivel cord
- Resting stand

Service

- 2-year worldwide guarantee



Issue date 2022-06-16

Version: 1.0.1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* after 2 years of simulated curling usages at 180°C of average
European, split free hair